Miele

Operating instructions
for dishwashers

It is **essential** to read these operating instructions before installing or using the machine, to avoid the risk of accident or damage to the machine.

GB

M.-Nr. 04 867 721

Contents

Guide to the appliance 4
Warning and Safety instructions 6
Caring for the environment 9
Before using for the first time 11
Opening and closing the door 13
Water softener 14
Programming the water softener 16
Setting the water hardness selector in the wash cabinet 18
Filling the salt reservoir/Salt indicator. 19/20
Adding rinse aid 21
Rinse aid dosage setting 22
Loading the dishwasher 23
Loading examples 24
Cutlery 26
Flap up racks, positioning rail, insert for glasses. 29
Adjusting the upper basket 30
Items not suitable for dishwashers 31
Adding detergent 32
Programme selection 35
Programme chart 36
Switching on and off 38
Programme interruption, programme change 39
Removing load 40
Additional options and functions 41
"TOP SOLO" 41
Switching drying heat on and off 42/43
Switching the buzzer on and off. 44
Cleaning and care 45
Dealing with minor faults 51
After sales service 53
Special accessories 54
Comparison tests 55

Installation instructions 59

Technical data 82

Guide to the appliance

View of the machine

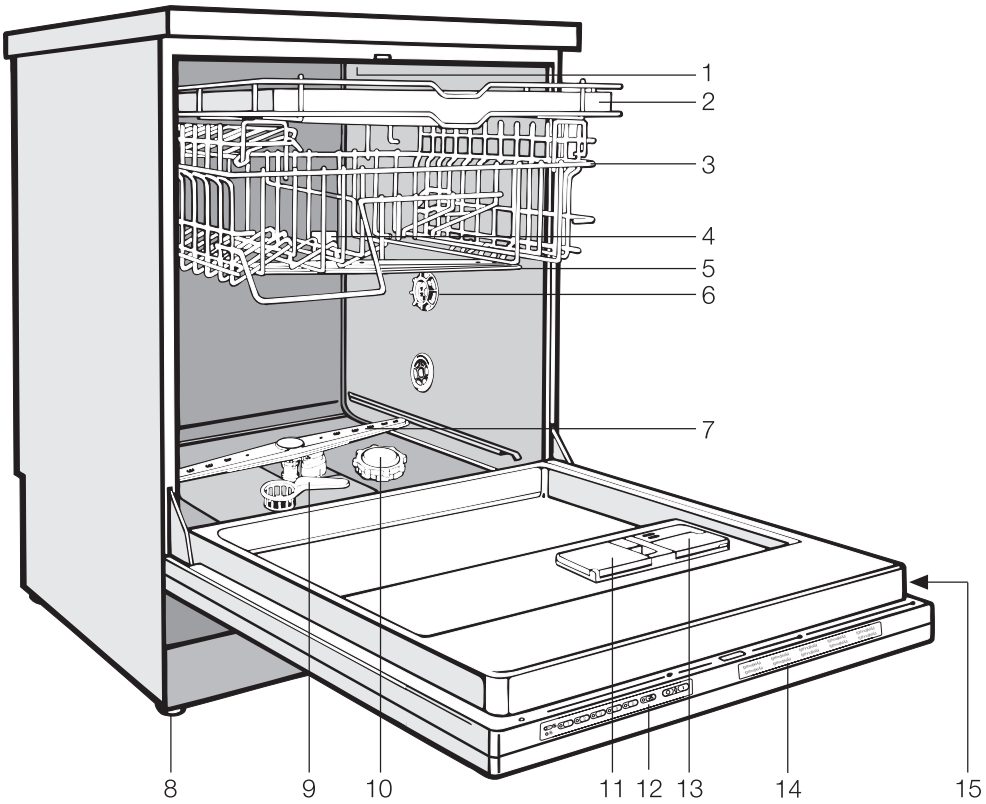

Control panel (12)

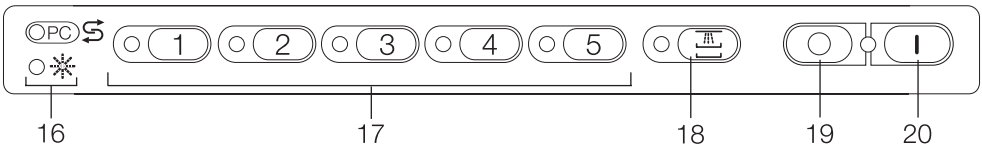

1 Upper spray arm (not visible)
2 Cutlery tray
3 Upper basket
4 Water duct for middle spray arm
5 Middle spray arm
6 Water hardness selector
7 Lower spray arm
8 Four height adjustable screw feet
9 Filter combination
10 Salt reservoir
11 Dual compartment detergent dispenser
12 Control panel
13 Rinse aid reservoir (with dosage selector)
14 Adhesive label with programme names
15 Data plate
16 Indicator lights
17 Touch pads
18 Function touch pad Top Solo
19 O - Off touch pad
20 I - On touch pad

Label with programme names

An adhesive label is supplied with the dishwasher. This can be placed in the indented area next to the programme touch pads.

- First clean and dry the indented area and ensure it is free from dust and grease.
- Remove the label from its backing and stick into the indented area.
- Remove the protective cover from the label.

Indicator lights

Add salt indicator light

Add rinse aid indicator light

Programme touch pads

① UNIVERSAL 65 °

② UNIVERSAL 55 °

③ ECONOMY 55 °

④ GENTLE 45 °

⑤ NORMAL 55 °

Top Solo

Off - touch pad

On - touch pad

This appliance conforms to current safety requirements. Inappropriate use can however lead to personal injury and damage to property. Read the operating instructions carefully before starting to use this machine. This way you will avoid the risk of accidents, and damage to the machine. Keep these instructions in a safe place for reference, and pass them on to any future user.

Appropriate usage

This dishwasher is intended exclusively for cleaning domestic crockery and cutlery in a domestic household. Do not use for purposes other than those for which it was designed. Any other applications may be dangerous.
The manufacturer cannot be held responsible for any damage caused by improper use or uses other than those for which the appliance is intended.

The following notes are to help avoid personal injury

To ensure stability integrated and built-under models must be installed under a continuous worktop which has been firmly screwed to neighbouring units.

The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system. It is imperative that this basic safety requirement is tested and where there is any doubt the electrical system in the house is checked out by a qualified electrician. The manufacturer cannot be held responsible for damage caused by the lack or inadequacy of an effective earthing system, (electric shock for example).

For safety reasons do not operate this appliance on an extension cable. Danger of overheating.

A damaged appliance is dangerous. Switch off at the mains and call the Service Department for assistance.

Repairs may only be carried out by suitably qualified and competent engineers to ensure safety. Repairs by unqualified persons could be dangerous.

With the “Waterproof system”, the plastic housing of the water inlet connection contains an electrical component. It must not be dipped in water.

Do not let small children play with the dishwasher and its controls or operate it.
There is a danger that children playing might shut themselves in the dishwasher. Please supervise its use by the elderly or infirm.

Do not use solvents in the dishwasher. Danger of explosion!

Avoid inhalation of powder detergents.

Dishwasher detergents contain irritant or corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Keep children away from detergents and from the dishwasher when the door is open. There could be detergent residues in the appliance.

To avoid the danger of children coming into contact with the dishwasher detergent: Only put it into the detergent dispenser just before starting the programme, and then secure the door with the child safety lock.
For models with “Delay Start” option make sure the detergent dispenser is dry before putting in detergent. Wipe dry if necessary. Detergent will clog if poured into a damp dispenser and may not be thoroughly dispensed. If the door is open at the end of a programme, children may come into contact with this residue.

Water in the dishwasher must not be used as drinking water.

Appliances with a cutlery basket: items of cutlery are cleaned and dried more efficiently if placed in the basket handles downwards. You may however, prefer to place cutlery with sharp points with the handles upwards.

Always disconnect the appliance from the electrical supply for maintenance work (switch off at wall socket and remove plug, screw out fuse in countries where this is applicable).

The following notes should help to avoid material damage

The voltage and frequency shown on the data plate must match the mains supply in the house.

Only use detergents formulated for domestic dishwashers. Do not use washing-up liquid.

Do not use commercial or industrial detergents as these may damage material and there is a risk of severe chemical reaction.

Inadvertently filling the salt reservoir with dishwasher detergent always leads to damage to the water softener. Make sure that you have picked up the right packet of dishwasher salt before filling the salt reservoir.

Inadvertently filling the rinse aid reservoir with powder or liquid detergent always leads to serious damage to the reservoir. Only use rinse aid formulated for domestic dishwashers.

Do not sit or lean on the opened door. This could cause the dishwasher to tip and be damaged.

Plastic items which cannot withstand being washed in hot water, e.g. disposable plastic containers, or plastic cutlery should not be cleaned in the dishwasher. The high temperatures could cause the material to distort.

The Miele Waterproof System offers protection from water damage, provided the following conditions are met:

- the dishwasher is correctly installed and plumbed in
- the dishwasher is properly maintained and parts are replaced where it can be seen that this is necessary
- the stopcock has been turned off when the machine is not used for a longer period of time (e.g. during holidays).

In countries where there are areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the appliance guarantee.

Dishwashers with visible heating elements

For appliances with the heating element in the wash cabinet do not touch the element during or directly after the end of a programme, you could burn yourself.

Some plastic items could melt or catch fire if they were to come into contact with the heating element. Therefore always place plastic items or any other items which may not be completely heat resistant in the upper basket and ensure they cannot drop through. Any items which are too small to be lodged securely in the upper basket should not be cleaned in the dishwasher.

Disposal of your old machine

When disposing of an old dishwasher first make it unusable. Disconnect, cut off the cable and the plug from the cable.
Make the door lock inoperative, so that children cannot accidentally shut themselves in. Make appropriate arrangements for the safe disposal of the appliance.

The manufacturer can not be held responsible for any damage caused by non-observance of the Warning and Safety instructions.

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old machine

Old machines may contain materials which can be reclaimed or re-cycled. Please contact your dealer, your local waste collection centre or scrap merchant about potential recycling schemes. Ensure that the machine presents no danger to children while being stored for disposal.
See the appropriate section in the Warning and Safety instructions.

Energy saving washing

These dishwashers are exceptionally efficient in their use of water and electricity. You can make the most of your appliance by following these tips:

- If your household water system is suitable, this dishwasher can be connected to a hot water supply, for further economies.
  However, if your water is heated by electricity we would still recommend connection to cold water.
  In the UNIVERSAL 55° programme, depending on the capacity of the dishwasher, when connected to hot water 55°C up to 0.7 kWh of electrical energy is saved. The hot water provides this energy, and the approx. 0.13 l oil or 0.14 m^3 natural gas needed to heat the water is considerably more cost effective.
  Although all stages of the wash then take place with hot water, savings are made in cost, time and energy.
- Make full use of the baskets without overloading the dishwasher for most economical washing.
- For small loads:
  Select the additional "Top Solo" option (see chapter "Additional options and functions")
- Choose the programme to suit the type of crockery being washed and the degree of soiling.
- If baskets are only half full use the ECONOMY programme.
- Use the correct dosages of detergent.

Before using for the first time please note the following points:

See the relevant chapters for detailed information on the points below.

Set the water softener

The water softener unit must be set to deal with the water hardness level in your area.

The salt reservoir must also first be filled with water and then with dishwasher salt. Never fill with dishwasher powder detergent.

Filling the salt reservoir with detergent by mistake will always damage the water softener. Please check every time before refilling that the package contains dishwasher salt.

Add rinse aid

Inadvertently filling the rinse aid reservoir with powder or liquid detergent, or washing up liquid, will damage the reservoir.

Only use rinse aid formulated for domestic dishwashers.

Do not use washing up liquid

Only use detergent formulated for domestic dishwashers.

Load the crockery correctly

Load the crockery so that water will come into contact with all surfaces.

This ensures that they will be properly cleaned.

The spray arms must not be blocked by items which are too tall for the basket or which hang through. If necessary manually rotate the spray arms to test.

Add the correct amount of detergent

Follow the detergent manufacturer's recommendations on how much detergent to use. Not using enough will lead to poor wash results.

Read the notes on dosage given in the programme chart.

Cleaning results may vary from brand to brand. If you are not satisfied with the results from one brand try another quality brand before contacting the Customer Service department for advice.

Before using for the first time

It is important to choose the correct programme

The NORMAL programme and the UNIVERSAL programmes are ideally suited to everyday loads. See the programme chart for descriptions of other programmes.

When the dishwasher is run for the first time the programme selected will not start for approx. 7 minutes.

During these 7 minutes the "Reactivate" (Regenerate) programme step is carried out and the indicator light ⇆ illuminates.

The filter combination in the base of the wash cabinet and the spray arms must be kept clean.

These should be regularly inspected and cleaned if necessary.

To open the door

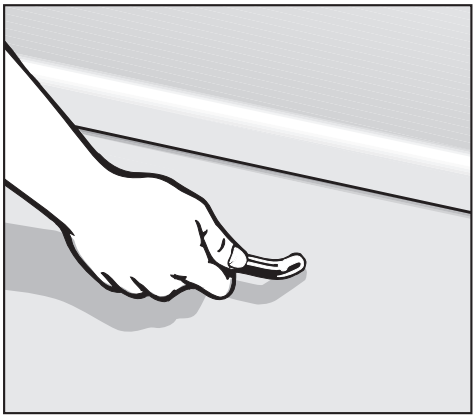

- Pull on the handle.

If the door is opened during operation all functions are automatically interrupted.

Note:
To open the dishwasher door without the matching door front fitted see section 3 of "Installation instructions", "Fitting the matching door front".

To close the door

- Push the baskets right in.
- Lift the door upwards and push until it clicks into position.

Water softener

To avoid the build-up of calcium deposits on crockery and cutlery, and in the dishwasher the water needs to be softened.

To ensure a steady supply of soft water the built-in water softener must be:

1. correctly set and
2. the salt reservoir must be filled with dishwasher salt for reactivation. (It is not necessary to reactivate with salt if the degree of hardness in the local supply is permanently under 70 mg/l (4 °d German scale).

The dishwasher is set at the factory to operate up to a hardness level of 310 - 400 mg/l (17 - 22 °d German scale).

If your water hardness level is different from this, the factory setting will need to be changed according to the chart on the next page.

Your local water authority will advise you on the water hardness of your area.

Where the hardness level fluctuates (e.g. 140-310 mg/l, 8 - 17 °d German scale) always take the highest value (value 17 in this example).

- In the event of requiring a service visit in the future make a note here of the water hardness level:

  Water hardness level: _____ mg/l

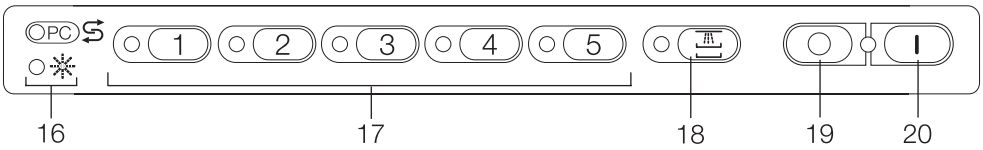

The water softener unit has been set at the factory for a water hardness of 310 - 400 mg/l (17 °d - 22 °d German scale). If the water is harder or softer in your area, the water softener unit must be reprogrammed, and in certain circumstances the water hardness selector in the wash cabinet must be re-set, (see setting chart).
See next page for programming the water softener unit.

Settings

°d	mg/l	touch pad selected (control-lamp)	water hard-ness selector (level)
1 - 4	20- 70	①	6
5 - 6	90- 110	②	6
7	130	③	6
8 - 10	140- 180	④	6
11 - 12	200- 220	⑤	6
13	230	+ ①	6
14 - 16	250- 290	+ ②	6
***17 - 22**	310- 400	+ ③	6
23 - 35	410- 630	+ ④	6
36 - 47	650- 850	+ ⑤	4
48 - 65	860-1170	+ ⑤	5
66 - 70	1190-1260	+ ⑤	6

* factory setting of water softener unit

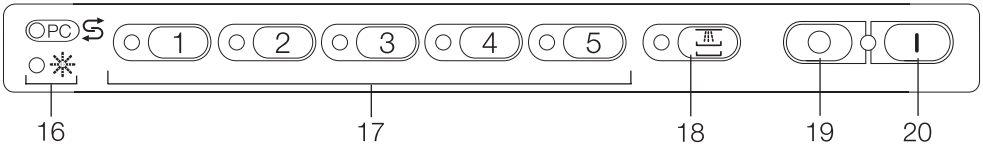

Programming the water softener

The programme touch pads are used to programme the water softener. It is possible to enter two separate values for water hardness, using the touch pad either singly (level 1) or in combination (level 2), (see settings chart).
For a level 1 value the indicator in the touch pad lights up.

Example:
The indicator light ③ comes on. The water softener is set for a water hardness of 130 mg/l (7°d German scale).

If the indicator in the touch pad (Top Solo) also lights up, the level 2 value has been selected.
Example:
The indicator lights and ③ come on: the water softener is set for a water hardness of 310 - 400 mg/l (17 - 22 °d German scale) (factory setting).

The salt indicator light flashes to show you are in programming mode.

To programme according to water hardness level proceed as follows:

- Open the door
- Switch off the dishwasher
- Press and hold in touch pads ① and ③ and at the same time switch on the dishwasher. The "On" indicator light comes on and the and ② indicator lights flash.

Warning: If some other indicator light flashes switch off the dishwasher and start again.

The following indicator lights can come on in addition to the "On" indicator light:

① – The drying heat is switched off (see section on "Additional functions").
④ – The buzzer is switched off (see section on "Additional functions").
⑤ – Special function for the Service Engineer only.

- Press touch pad ② to be able to enter data. The indicator light ② goes out. Indicator lights ①, ④ and ⑤ also go out if previously on, and the corresponding water hardness level has not been selected.
- Press the touch pad corresponding to the water hardness to be set (see settings chart). While the selected pad is pressed in its indicator light stays on.
  With a water hardness above 220 mg/l (12 °d German scale) first press the touch pad, (its indicator will light up) to access programming level 2.
  Example: Where the water hardness is 430 mg/l (25 °d German scale), press and then press touch pad ④.
- Release the touch pad, the indicators and ② will flash.
- Press touch pad . Its indicator lights up and the indicator light flashes.
- Press the touch pad again. The indicators and will flash.
- Switch off the dishwasher. The programmed water softener setting is now programmed according to the water hardness and is stored.

To check the programmed water hardness:

- Open the door.
- Switch off the dishwasher.
- Press and hold the touch pads ① and ③ and at the same time switch on the dishwasher.
  The "On" indicator light comes on and the and ② indicator lights flash.

Warning: If some other indicator light flashes switch off the dishwasher and start again.

The following indicator lights can come on in addition to the "On" indicator light:

① – The drying heat is switched off (see section on "Additional functions").
④ – The buzzer is switched off (see section on "Additional functions").
⑤ – Special function for the Service Engineer only.

- Press touch pad ② to check the programmed water softener setting. The indicator light ② goes out. Indicator lights ①, ④ and ⑤ also go out if these have been on previously and the corresponding water hardness level has not been selected.
- If the water softener has been set for a water hardness between 0 and 220 mg/l (0 °d and 12 °d German scale) the indicator light in the relevant touch pad lights up (see settings chart).
  If no indicator lights up the softener has been set for a water hardness between 230 and 1260 mg/l (13 °d and 70 °d German scale. Then:
- Press the touch pad, to access programming level 2, its indicator lights up.
  The indicator light of the touch pad which corresponds to the water hardness set lights up (see settings chart).
- Switch off the dishwasher.

Setting the water hardness level selector in the wash cabinet

The water hardness selector is set at setting 6 in the factory. It is only necessary to reset the selector if water hardness in your area measures between 650 and 1170 mg/l (36 - 65 °d German scale, see chart).

°d	mgl/l	water hardness selector (level)
1 - 35	20- 630	6*)
36 - 47	650- 850	4
48 - 65	860-1170	5
66 - 70	1190-1260	6*)

*) factory setting

For technical reasons do not set the selector to setting 1 - 3.

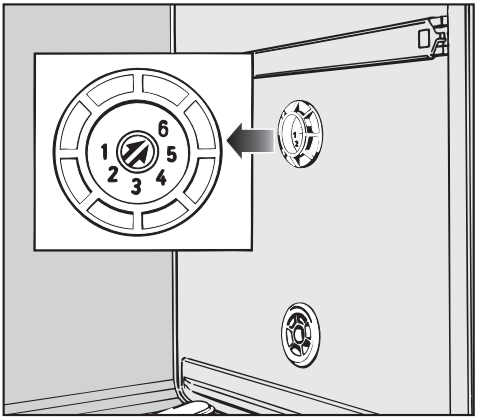

- Using a screwdriver remove the cover from the water hardness selector.
- Use a coin or screwdriver to adjust the water hardness level selector in the wash cabinet. There is a click as each setting is reached.
  Example:
  The water hardness level is 680 mg/l. The water hardness level selector must be set to setting 4, 650 - 850 mg/l (36 - 47 °d German scale).
- Fit the cover of the water hardness selector back in place.

Filling the salt reservoir

Please only use special coarse grained dishwasher salt for reactivation, as other salts may contain insoluble additives which can impair the functioning of the softener.
The salt reservoir holds approx. 2 kg of salt.

Inadvertently filling the salt reservoir with dishwasher detergent always leads to damage to the water softener.
Make sure that you have picked up the right packet of dishwasher salt before filling the salt reservoir.

- Remove the bottom basket.
- Unscrew the salt reservoir cap.

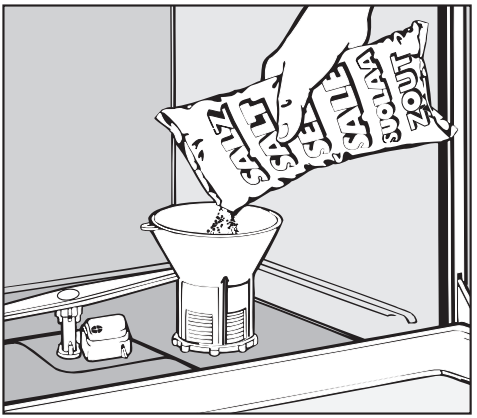

Before filling the salt reservoir for the first time:
Fill the salt reservoir with approx. 2 litres of water.

- Place the funnel (provided) in place.
- Fill carefully with salt
  (As it is filled displaced water will run out).
- Clean salt from the screw threads of the socket.
- Screw the cap on firmly.
- Run the UNIVERSAL programme immediately to remove any traces of salt water from the cabinet.

Salt indicator

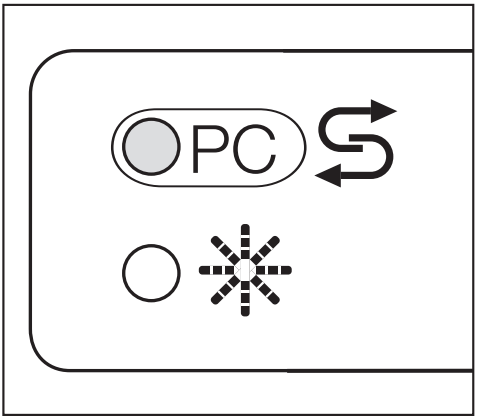

When the salt reservoir is empty the indicator light ⇆ comes on. The reservoir should be refilled with dishwasher salt for reactivation.

After the reservoir has been refilled with salt the water softener is automatically reactivated either the next time the dishwasher is run or the time after that.

The indicator light ⇆ illuminates during this process.

Note

With very soft water, i. e. constantly at a level below 70 mg/l (4 °d), the reservoir does not have to be filled with salt and although the salt light does come on, this can be disregarded.

The ⇆ indicator light (marked PC) is also designated for any future updates to programmes, (see After Sales Service).

Rinse aid is necessary to ensure that water does not cling and leave marks on crockery during the drying phase. Rinse aid is poured into the storage reservoir and the amount set is dispensed automatically.
The rinse aid reservoir holds approx. 130 cm^3.

Inadvertently filling the rinse aid reservoir with powder detergent (or liquid detergent) always leads to damage to the reservoir.
Only pour rinse aid formulated for domestic dishwashers into the reservoir.

Although it is possible to use household vinegar with a max. 5% acid content, or liquid citric acid up to 50% acid as an alternative, the resulting rinsing and drying quality will not be as good as when rinse aid is used.
Do not use vinegar with a high acid content (e.g. vinegar essence 25% acid). This must not be used as its use would damage the dishwasher.

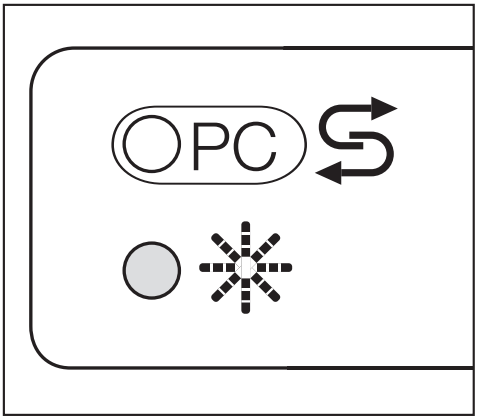

- Add rinse aid when the indicator light ✳ on the control panel comes on.

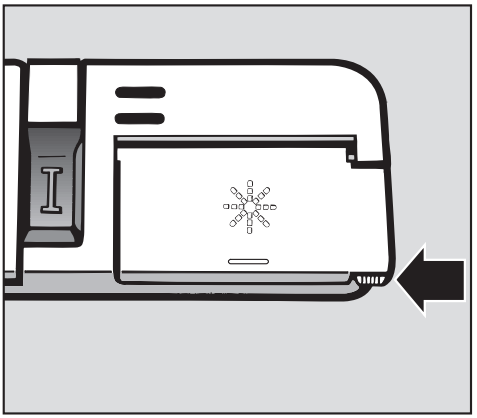

- Press the button in (in the direction of the arrow) until the flap springs open.

Adding rinse aid

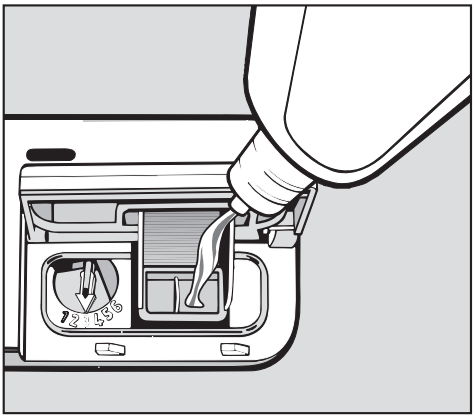

- Add rinse aid only until it is visible on the surface of the filter in the opening.
- Close the flap firmly.
  The flap must audibly engage, otherwise water could get into the rinse aid storage container during the programme.
- Mop up any spilt rinse aid. This prevents over-foaming occuring during the next programme.

The flap should normally remain closed. Only open it for adding more rinse aid.

- Wait until the indicator light ✳ on the control panel lights up before adding more rinse aid.

Setting the dosage

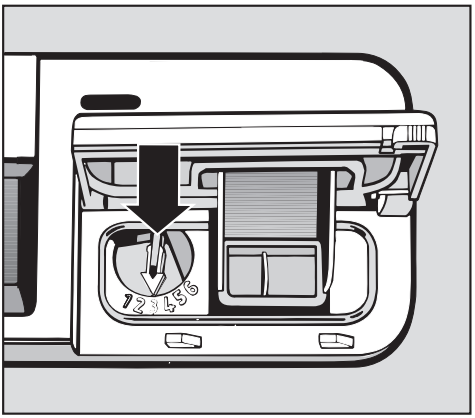

The dosage adjuster (see arrow) in the opening has settings from 1 to 6. It is set to 3 at the factory, as the recommended dose. The setting dispenses approx. 3 ml rinse aid per programme.

- If there are flecks on glasses after drying use a higher setting.
- If smearing appears on crockery use a lower setting.

Important

- Load the crockery so that water will come into contact with all surfaces. This ensures that they will be properly cleaned.
- Do not place crockery and cutlery inside other pieces where they may be concealed.
- Hollow items e.g. cups, glasses etc. must be inverted in the basket.
- Deep based items should be placed at an angle such that water runs off them freely.
- Tall narrow hollow pieces should be placed in the centre of the basket, rather than in the corners, to ensure good coverage of water.
- Small pieces should be placed on the cup racks. Cups should be on the lower rack and bowls on the top rack so that water reaches all pieces.
- The spray arms must not be blocked by items which are too tall for the basket or which hang through. If necessary manually rotate the spray arms to test.
- Some foodstuffs may contain natural dyes, e.g. carrots, tomatoes or ketchup. Plastic items in the dishwasher may discolour if large quantities of these foodstuffs find their way into the appliance on the crockery. The stability of the plastic items is not affected by this discolouration.

Do not touch the heating element during or directly after the end of a programme, you could burn yourself.

Loading examples

Bottom basket

Larger and heavier items such as plates, serving platters, saucepans, bowls. Depending on the dishwasher model glasses may only be cleaned in the bottom basket if it is fitted with a special glassware insert or if there is a special bottom basket.

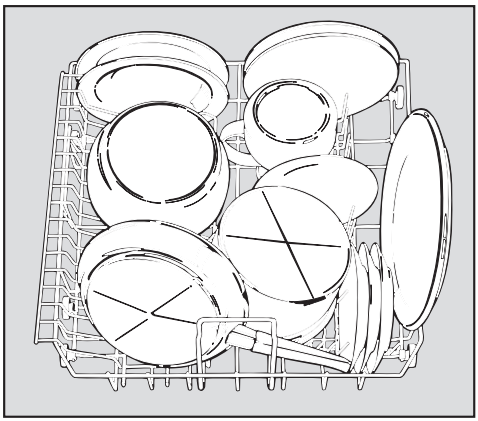

Dishwasher with cutlery tray

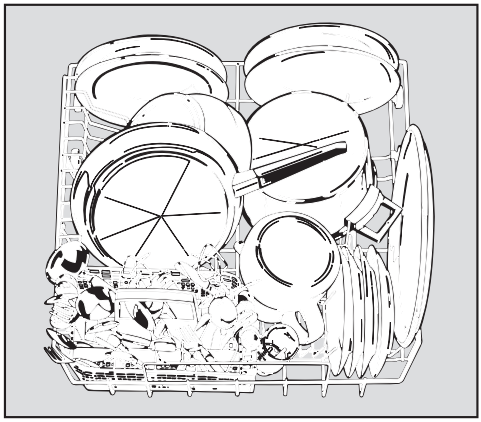

Dishwasher with cutlery basket

Height limit

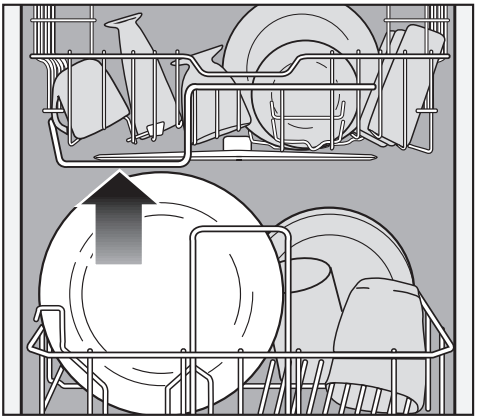

The height guard at the base of the upper basket is there to protect the middle spray arm. No object placed in the lower basket should stand higher than this guard.

Upper basket

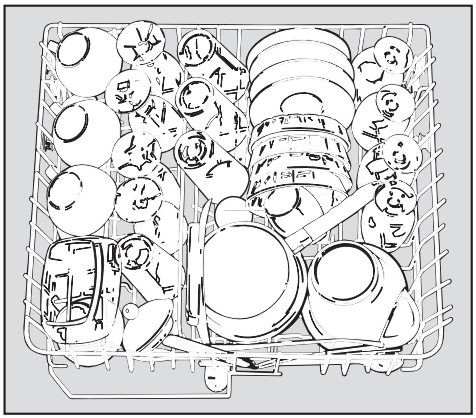

Small, lightweight, delicate items such as cups, saucers, glasses, dessert bowls, etc. and also heat sensitive plastic ware.

Note for “Top Solo”

If a wash programme has been selected with the additional option “Top Solo”, all crockery must be loaded into the upper basket and cutlery tray.

As the middle spray arm also directs water downwards, lightly soiled plates or platters can be placed in the bottom basket if there are large spaces between them. Do not place dishes, bowls or other hollow containers in the bottom basket.

If using a cutlery basket space the cutlery well out.

For further notes see Section "Additional options and functions - Top Solo".

Cutlery

Dishwasher with cutlery basket

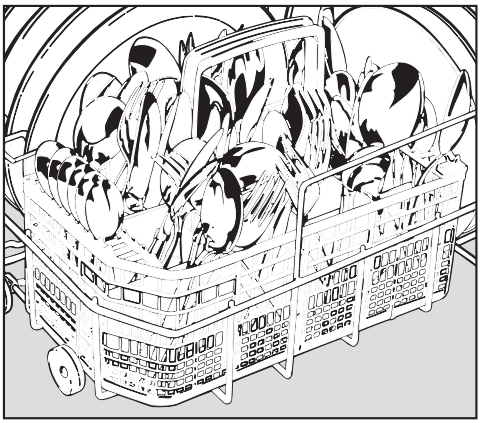

Unsorted cutlery should be placed in the cutlery basket, handles facing downwards.

You may, however, prefer to place cutlery with sharp points with the handles upwards to avoid possible injury.

Place small spoons in the individual slots to either side of the cutlery basket.

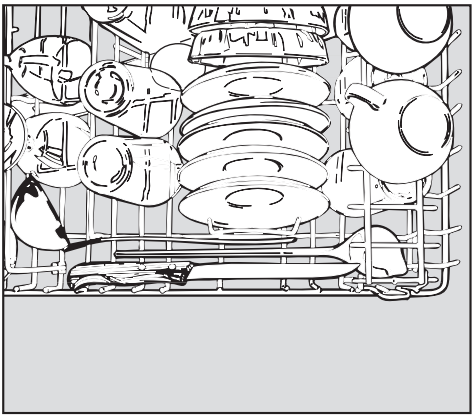

Larger items like soup ladles, long knives and mixing spoons should be placed lying down across the front of the upper basket.

Spoon inserts for cutlery basket

Use the inserts supplied when washing heavily soiled spoons, e.g. tablespoons and serving spoons.

The inserts separate the spoons to allow a space between them, for the water jets to reach the entire surface.

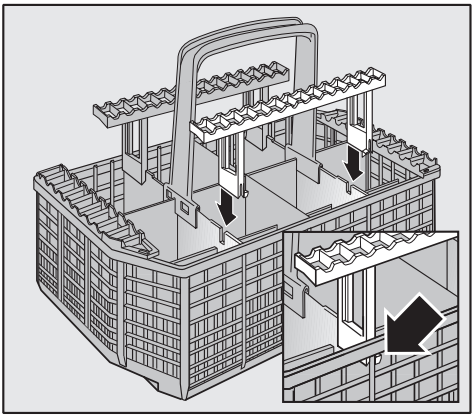

- When needed place one insert at the front and one at the back of the cutlery basket.

Removing the inserts:

- Press the catches (which are already clicked in) inwards (if necessary use a spoon handle) and pull the inserts upwards and out.

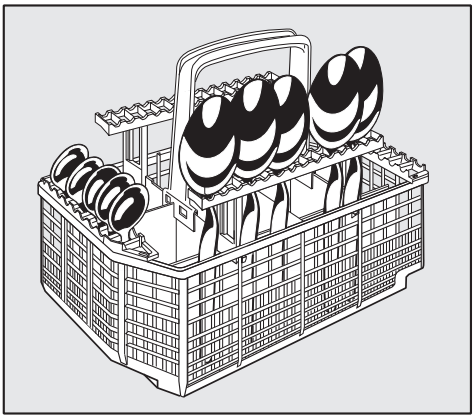

- Place the spoons into the inserts with the handles facing downwards. Only use alternate slots.

Dishwasher with cutlery tray (SC models)

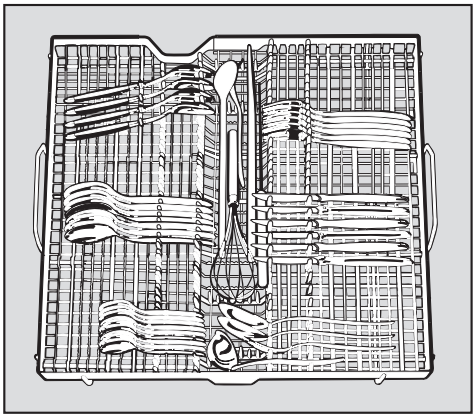

For best results cutlery should be grouped in zones, one for knives, one for forks, one for spoons etc. This makes unloading much easier.

Larger items like sauce ladles, cake slices, long knives and mixing spoons can be placed lengthwise in the trough in the centre of the tray.

The upper spray arm must not be blocked by items which are too big, e.g. cake slices.

The cutlery tray insert is removable (depending on model).

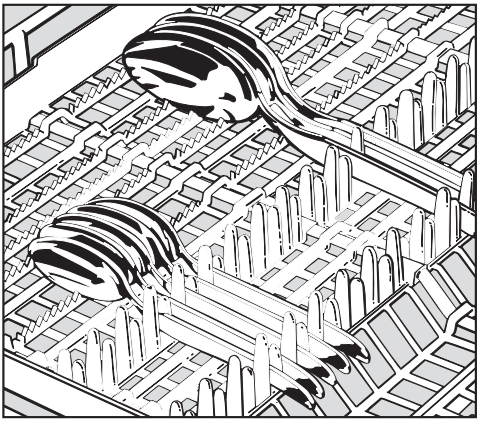

Ensure that spoon heads are in contact with at least one of the grips in the cutlery tray. This way they cannot collect water.

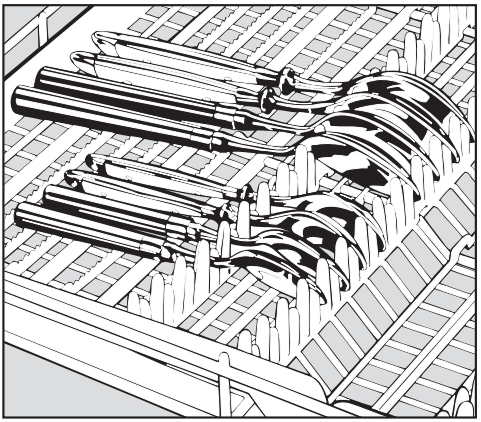

Cutlery with round or oval handles should be placed with the heads in the grips as this prevents them slipping.

If putting the spoons this way round, make sure the spoon heads touch at least one of the strips on the floor of the tray, so that the water still runs off.

Flap up racks

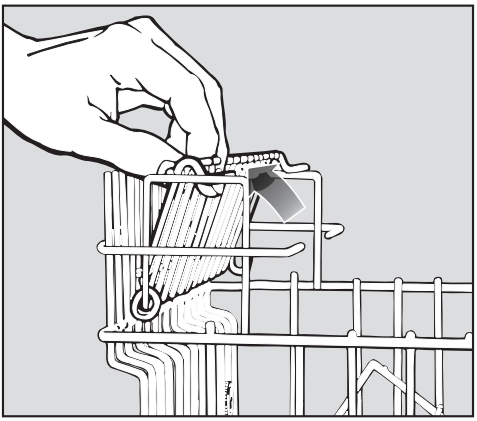

Can either be used for a second row of cups or raised upwards to make room for tall items.

Positioning rail

(standard feature depending on model)

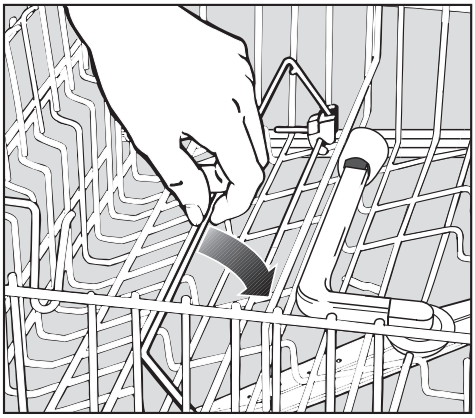

For easy sorting and removing of crockery the positioning rail can be rested to one side.

Raise it again afterwards so that crockery can rest against it in the basket.

Insert for glasses

(only for models with removable inserts in the bottom basket, standard feature depending on model)

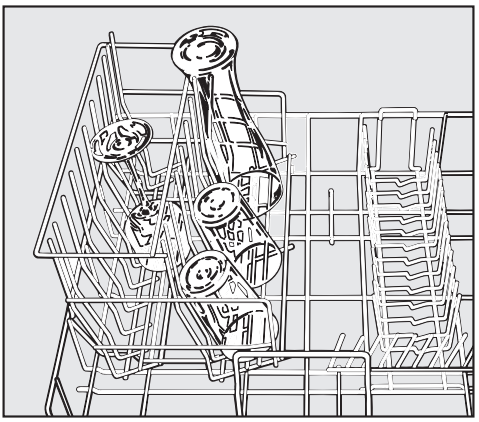

The insert for glasses can be fitted in the left or right of the bottom basket in place of a removable insert.

Very tall glasses, e.g. tall beer glasses, can be stacked vertically so that they are held more securely.

Adjusting the upper basket

(depending on model)

In order to gain more space for taller pieces of crockery in the bottom or upper basket, the upper basket can be adjusted in three steps with 2 cm between each step.

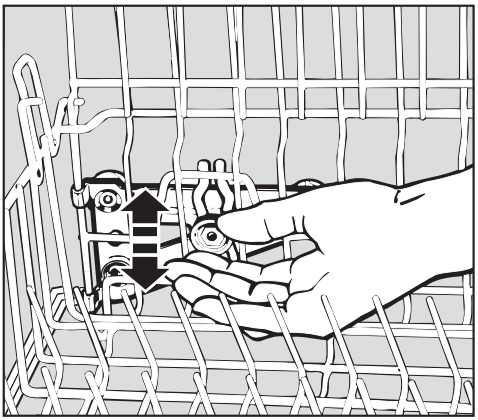

- Pull out the upper basket and loosen the two locknuts on either side of the basket.
- Adjust the basket up or down to the right height.
- Tighten the locknuts.

The upper basket can also be set to an angle, with one side high, and the other side low. Ensure however that the basket can be inserted smoothly into the cabinet.

Depending on the setting of the upper basket the following dimensions can be accommodated:

Dishwashers with cutlery tray

Upper basket position	plates Ø in cm	
	Upper basket	Lower basket
Top	15.5	30
Middle	17.5	28
Bottom	19.5	26

Dishwashers with cutlery basket

models with adjustable upper basket

Upper basket position	plates Ø in cm	
	Upper basket	Lower basket
Top	21.5	30
Middle	23.5	28
Bottom	25.5	26

models with non-adjustable basket

Plate Ø in upper basket: 23.5 cm
Plate Ø in lower basket: 28 cm

– cutlery with wooden or horn handles,
– wooden or plastic chopping boards,
– glued items, e.g. old knives with handles which have been glued on,
– hand-made craft items,
– copper or tin items,
– plastic items which are not heat resistant.

Please note

– Silver- and aluminium items can suffer some discolouration.
– Aluminium components (e.g. grease filter) must not be cleaned with caustic alkaline commercial or industrial detergents. This may damage material or, in extreme cases, cause severe chemical reaction.
– Silver, treated with a silver polish may still be damp or spotted at the end of a programme, where water has not run off smoothly. It may need rubbing dry with a soft cloth. Silver, treated in a silver immersion dip is usually dry at the end of a programme but may discolour.
– Colours painted over a glaze may fade after many washes.
– Clouding may occur on glasses after frequent washing.

We recommend:

- Wash delicate glassware in the ECONOMY 55 ° - programme, (or for models where the programme is available, GENTLE 45°C). This will reduce the risk of clouding.
- There are no standard guidelines for washing glassware. When in doubt wash by hand.
- When purchasing new crockery and cutlery, make sure they are dishwasher safe.

Only use detergents formulated for domestic dishwashers. Do not use washing up liquid.

Please note
Dishwasher detergents contain irritant or corrosive ingredients. They can cause burning in the mouth and throat if swallowed, or inhibit breathing. Keep children away from detergent and from the dishwasher when the door is open. There could still be detergent residues in the cabinet.
To avoid the danger of children coming into contact with the dishwasher detergent:
only put it into the detergent dispenser just before starting the programme.

Selecting detergent

Recently almost all detergent manufacturers have launched new detergents with a different composition, in addition to standard types.

Should you experience difficulties when using these types of products, please contact Miele Customer and Technical Services Department, or the detergent manufacturer's own Advisory Service.

These new dishwashing detergents, although welcome from an ecological point of view, react to a different degree from conventional products to water hardness. The drawbacks may only become apparent after a prolonged period of use.

The following problems may occur:

– White deposits on crockery and inner cabinet.

– Increased etching in the form of a bluish sheen on the surface of glassware.

– Discolouration of silverware.

Appearances of this nature are generally caused by the detergent used and are not attributable to any malfunctioning of the dishwasher itself.

Preventive measures:

1. If you wish to continue using the new chlorine and phosphate-free products, the following is recommended:

– Try out an environmentally friendly detergent of the same type from another manufacturer.

2. If you are still dissatisfied with the results, we recommend the use of chlorine-free but not phosphate-free detergent.

– Set the water softener and dispense detergent according to instructions given in this instruction booklet.

3. If results are still not to your satisfaction, you should revert back to using conventional detergents containing both chlorine and phosphate.

– Set the water softener and dispense detergent according to instructions given in this instruction booklet.

Should you experience difficulties when using these types of products, please contact the detergent manufacturer's own Advisory Service.

Dishwasher detergent must be added before each programme.

– Pour powder or liquid detergent into the dispenser.
– Dishwasher detergent tablets can be put at various places in the wash cabinet, (follow the manufacturer's advice on the packet).

Detergent manufacturers give the required amount of detergent in ml (or g) on the packaging.

For the NORMAL programme and the UNIVERSAL programmes use at least 30 ml (or g) detergent unless advised to use more by the manufacturer, then use what they advise.

The amount to dispense will depend on the type of load and the programme selected.
See the programme chart on the next pages for advice on amounts to dispense.

If you buy detergent in bulk please ensure that the container is always properly sealed after use. Otherwise the detergent can lose its effectiveness.

Adding detergent

For information:
Compartment I takes max. 25 ml, Compartment II max. 80 ml. There are horizontal markers to assist with dispensing in compartment II, indicating the level in ml.

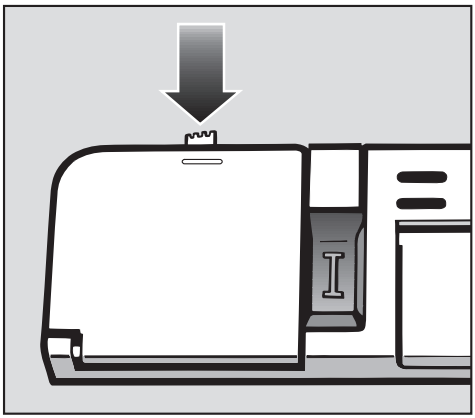

- Press the opening catch on the container flap.
  The flap will spring open.

The flap is always open at the end of a programme.

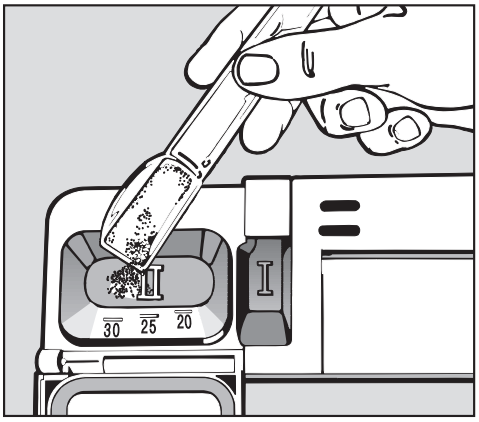

- Pour in the required amount of detergent.
- Shut the flap.

Choose your programme according to the type of load and how dirty it is.

In most cases this will be the NORMAL programme or one of the UNIVERSAL programmes.

– NORMAL 55 °

– UNIVERSAL 55 °or 65 °

These programmes are ideally suited to everyday loads, mixed loads with varying degrees of soiling.

For particular needs there are special programmes:

The different programmes and their uses are described on the next two pages in the Programme chart.

You can choose the additional option "Top Solo" for each programme.
See the "Additional options and functions" section for further information.

Programme chart

Programme	When to use	Detergent		
		A [1]		**B** [2]
		Compartment I (Pre-wash)	Compartment II (Wash cycle)	Compartment II (Wash cycle)
Normal and Universal Programmes				
NORMAL 55 ° (Touch pad ⑤)	This programme is for normal everyday loads and is particularly suitable for chlorine free detergent		100%	100 %
UNIVERSAL 55 ° [3] (Touch pad ②)	This programme is for normal everyday loads	20 %	80%	100 %
UNIVERSAL 65 ° (Touch pad ①)	as UNIVERSAL 55 °, but higher temperatures for stubborn dried on particles	20 %	80 %	100 %
Special programmes				
ECONOMY 55 ° (Touch pad ③)	for full loads with very light soiling, e.g. coffee cups, or: for half a, normal everyday load		50 %	50 %
GENTLE 45 ° (Touch pad ④)	"Gentle programme", for lightly soiled crockery and for heat sensitive crockery		50 %	50 %

The amount dispensed will depend on the type of detergent being used:

A [1] Use this method for:
- detergents which contain phosphates and chlorine (except liquid detergent)

Divide the total amount proportionally between compartment I and compartment II.

B [2] Use this method for:
- detergent which is chlorine and phosphate free
- detergent which is chlorine free but contains phosphates
- liquid detergent

In this instance the whole amount is placed in compartment II.

For the NORMAL programme and the UNIVERSAL programmes use at least 30 ml (or g) detergent unless advised to use more by the manufacturer, then use what they advise.

When setting "Top Solo" add detergent to compartment II only (approx. 2/3 of total amount for full load) or according to degree of soiling.

Programme cycle					Consumption			Time	
					Energy kWh		Water	Minutes (approx.)	
Pre-wash	Main wash	Interim-rinse	Final rinse	Drying-phase	Water cold (15 °C)	Water hot (55 °C)	Litres[4]	Water cold (15 °C)	Water hot (55 °C)
	X 55 °	X	X 65 °	X	1.3	0.9	13	80	67
X	X 55 °	X	X 65 °	X	1.3	0.9	17	85	72
X	X 65 °	X	X 65 °	X	1,4	1.0	17	88	74
	X 55 °	X	X 55 °	X	1.2[5]	0.7[5]	13	60[5]	50[5]
X	X 45 °	X	X 55 °	X	1.2	0.6	17	68	55

3) Standard programme (see chapter “Comparison tests“)

4) Average consumption with water hardness 310 mg/l (17 °d German scale), (see section "Water softener)

5) with half loads (6 place settings)

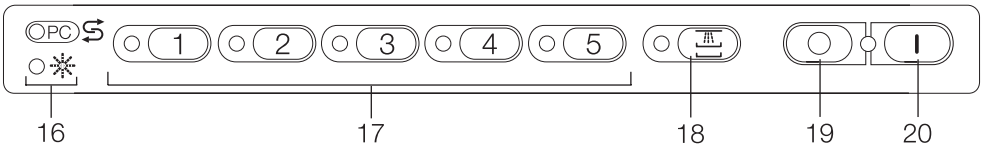

Switching on

- Open the door.
- Open the stopcock (if it is closed).
- Press the "I" (On) touch pad (20).
  The "On" indicator light comes on.

Starting a programme

- Press the touch pad for the required programme.The indicator light comes on in the touch pad pressed.
- If required select "Top solo" (🍽) before starting the programme.
  (see section "Additional options and functions").
- Close the door. The programme starts.

For information

The "Reactivation" process is carried out before a wash programme. It lasts several minutes.

The hardness level of the inlet water dictates how often (after how many programmes) water needs to be softened. For example with a water hardness degree of 380 mg/l (21 °d German scale) reactivation takes place after every 3 programmes. With a water hardness degree of 140 mg/l (8 °d German scale) reactivation takes place after 8 programmes.

Do not cancel the programme prematurely, as important programme steps such as preparing the water softener may be left out.

Programme end

A buzzer sounds at the end of the programme cycle.

This buzzer is then repeated for one hour at ten minute intervals.

You can switch this buzzer off (see section on "Additional options and functions").

Programme interruption

A programme is interrupted as soon as the door is opened.
If the door is closed again the programme will continue from the position it was interrupted.

Warning
Water in the dishwasher may be hot. Danger of scalding !
Only open the door if absolutely necessary and exercise caution when doing so.
Before closing the door leave it ajar for approx. 20 secs. This will enable the temperature in the wash cabinet to settle. Close the door firmly making sure that it clicks into place.

Programme change

A change can be made to the programme selected before the door is closed.

- Press the touch pad for the new programme required.
  (Reselect "Top solo" if necessary)
- Close the door. The programme starts.

If a programme has already begun first switch off the dishwasher, and then start again.

Switching off

On completion of a programme:

- Open the door slightly. The indicator light in the programme touch pad goes out.

If the indicator light in the programme touch pad still glows, the relevant programme has not yet finished. Close the door again, for the programme to finish.

- Press the "O" (Off) touch pad (19). The indicator light goes out.
- Open the door completely and unload the dishwasher.(see section "Remove load")
- Close the door.

If the dishwasher is not to be used for a longer period of time, e.g. whilst holiday:

- Turn off the stopcock.

Remove load

- Hot crockery will chip and break more easily.
  After switching off let it cool down in the dishwasher until it is comfortable enough to handle, before you unload it.
- If you open the door fully after switching off, the crockery will cool down much faster.
- First unload the bottom basket, then the upper basket and then the cutlery tray (if you have one) at the very end.
  This way you avoid water droplets from the upper basket or the cutlery tray falling on to crockery in the bottom basket.

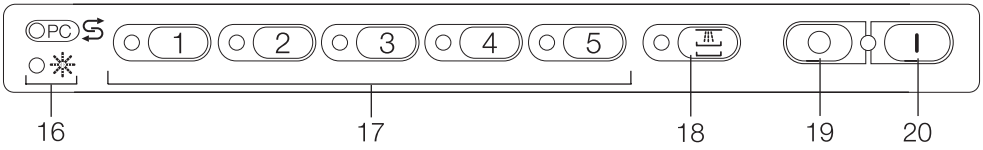

Top Solo (18)

(for small amounts of crockery)

With this option the majority of the water is directed only to the top and middle spray arms in the dishwasher. This means that the water jets are aimed only at items in the upper basket and cutlery tray.

This additional option is recommended when there is only a small amount of crockery and cutlery to clean which fits into the upper basket and the cutlery tray.

Lightly soiled plates or serving platters can still be placed in the bottom basket if there are large spaces between them. Do not place dishes or bowls or other hollow containers in the bottom basket.

By using the Top solo option water, detergent and energy savings are also made.
For example in the UNIVERSAL 55° programme only 11 litres of water are used instead of 17 litres and only 1.1 kWh instead of 1.3 kWh.

Because smaller amounts of crockery are being washed the amount of detergent recommended by the manufacturer can be reduced to approx. 2/3 of the total amount for a full load. Make sure, however, when reducing the amount dispensed that the cleaning result is not affected.

The Top solo option can be selected with all wash programmes.

- Choose the programme.
- Press (18) touch pad. The indicator light next to the touch pad illuminates.
- Close the door. The programme starts.

Switching off drying heat

In all wash programmes a heater element helps with drying.
The drying heat can be switched off, shortening the length of the wash programmes by approx. 2 minutes and saving approx. 0.1 kWh energy.
The load then dries to a certain extent in its own heat.
To assist drying the dishwasher door can be opened partially at the end of the programme to release moist air.

To switch off drying heat proceed as follows:

- Open the door.
- Switch off the dishwasher.
- Press and hold the touch pads ① and ③ and at the same time switch on the dishwasher.
  The "On" indicator light comes on and the ⇆ and ② indicator lights flash.

Warning: If some other indicator light flashes switch off the dishwasher and start again.

The following indicator lights can come on in addition to the "On" indicator light:

① – The drying heat is already switched off.
④ – The buzzer is switched off.
⑤ – Special function for the Service Engineer only.

- Press touch pad ① The indicator light ① lights up. Drying heat is now switched off.
- Press touch pad , the indicator lights up and the indicator flashes. The indicator lights ① and ② go out. Indicator lights ④ and ⑤ also go out if these have been on previously.
- Press touch pad once again. Indicator lights and flash.
- Switch off the dishwasher. Cancellation of drying heat is now stored in memory.
  Programmes run without drying heat.

Switching on drying heat

In order to switch drying heating back on, follow the same procedure.
The indicator light in touch pad ① goes out if it was pressed.

Switching off the buzzer

A buzzer sounds to indicate the end of the rinse programme. You can switch this buzzer off.

To switch off the buzzer proceed as follows:

- Open the door.
- Switch off the dishwasher.
- Press and hold the touch pads ① and ③ and at the same time switch on the dishwasher.
  The "On" indicator light comes on and the ⇆ and ② indicator lights flash.

Warning: If some other indicator light flashes switch off the dishwasher and start again.

The following indicator lights can come on in addition to the "On" indicator light:

① – The drying heat is switched off.
④ – The buzzer is already switched off.
⑤ – Special function for the Service Engineer only.

- Press touch pad ④ . The indicator light ④ lights up. The buzzer is now switched off.
- Press touch pad ⏍, the ⏍ indicator lights up and the ⇆ indicator flashes. The indicator lights ④ and ② go out. Indicator lights ① and ⑤ also go out if these have been on previously.
- Press touch pad ⏍ once again. Indicator lights ⏍ and ⇆ flash.
- Switch off the dishwasher. Cancellation of the buzzer is now stored in memory.
  The buzzer will not sound at the end of the rinse programme.

Switching on the buzzer

In order to switch the buzzer back on, follow the same procedure.
The indicator light in touch pad ④ goes out if it was pressed.

Cleaning the filters in the wash cabinet

The dishwasher must not be used without all the filters in place!

The filter combination in the base of the wash cabinet should be regularly inspected and cleaned if necessary:

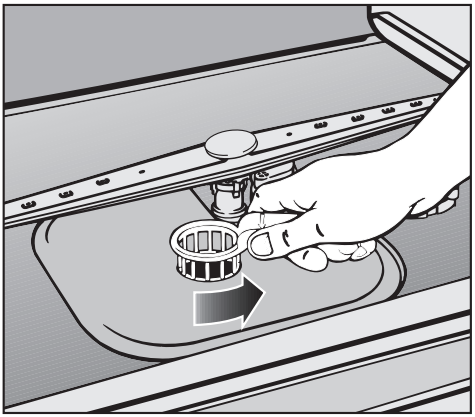

- Turn the handle anti-clockwise to release the filters.

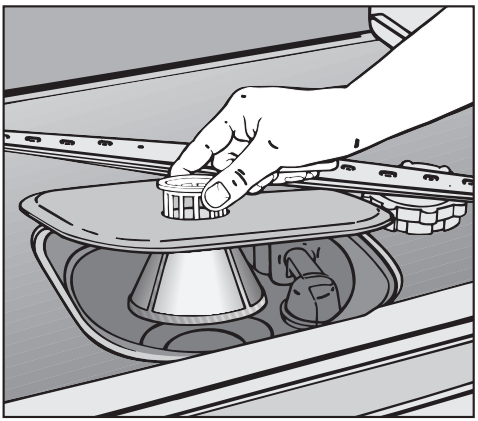

- Lift and take the filter combination out of the machine. Remove coarse particles and rinse under running water. Use a nylon brush if necessary.

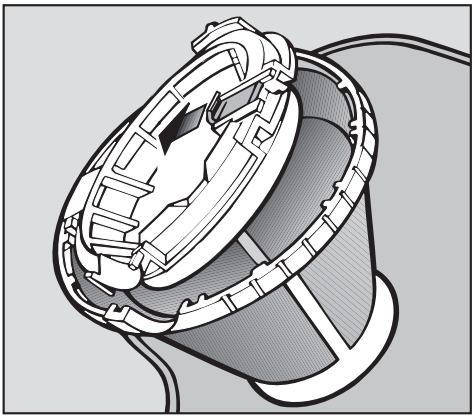

- Turn the filter combination over and open the coarse filter by pulling back on the locking device.
- Clean the coarse filter under running water, using a brush if necessary, and press the locking device back in.

Important:
After cleaning make sure that the locking device is properly locked.

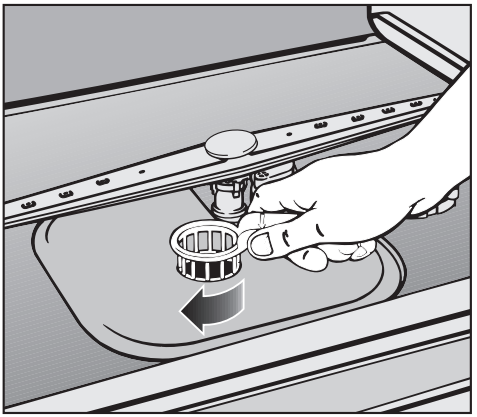

- Replace the filter combination so that it lies flat in the base of the wash cabinet. Secure the filter by turning the handle in a clockwise direction.

Cleaning the spray arms

Particles of food can get stuck in the spray arm jets.
The spray arms should be inspected and cleaned regularly (approx. every 6 months).

To do this remove the spray arms as follows.

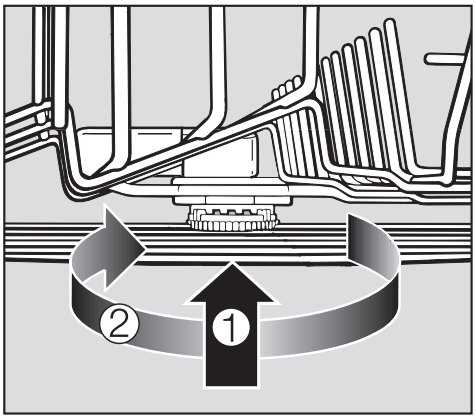

- Lift up the middle spray arm ① to engage the tooth-wheel mechanism. Then unscrew the spray arm ②.

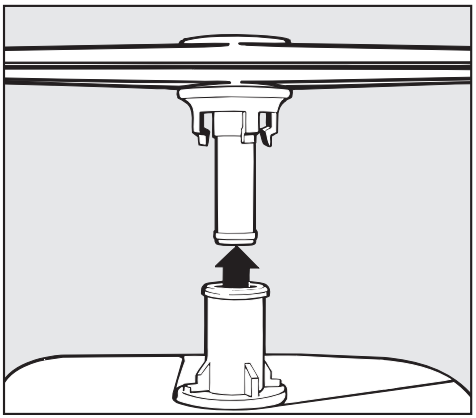

- Remove the lower basket and take out the lower spray arm.

Dishwashers with cutlery basket:

- Unscrew the upper spray arm.

Dishwashers with cutlery tray:

- Pull out the cutlery tray.
- Lift up the upper spray arm to engage the tooth-wheel mechanism and then unscrew the spray arm.

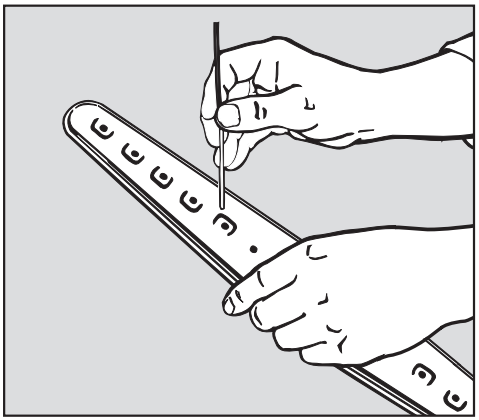

- Using a sharp pointed object push the food particles into the spray arm jets and rinse well under running water.

Please note:
After replacing the spray arms check that they move freely.

Cleaning the drain pump and non-return valve

If water has not been pumped away at the end of a programme the drain pump or the non-return valve might be blocked. They are, however, easy to clean. Watch out for glass splinters, which could cause injury.

- Take the filter combination out of the wash cabinet.
- Use a jug or bowl to scoop water out of the wash cabinet.

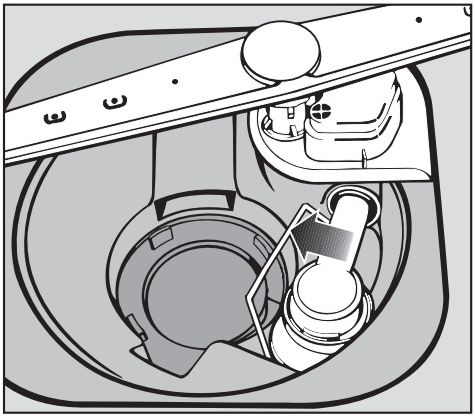

- Raise the locking clamp.

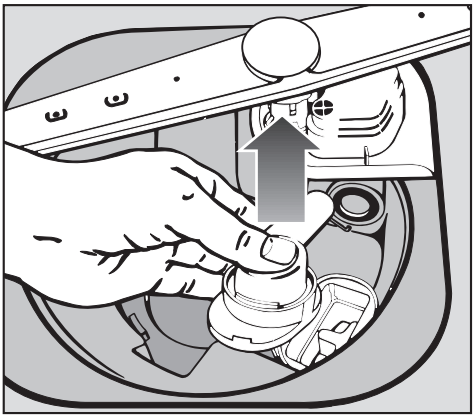

- Lift up the non-return valve and rinse under running water.

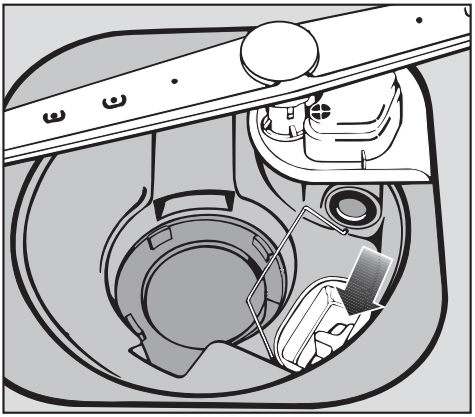

The drain pump is situated under the non-return valve (see arrow).

- Before replacing the non-return valve check that the drain pump impeller turns with only slight resistance, and that there is no obstruction.
- Carefully replace the non-return valve and secure with the locking clamp.
- Replace and secure the filter combination.

Cleaning the filter in the water inlet

A filter is incorporated in the screw connection of the valve on the water inlet hose. The filter must be cleaned when dirty, otherwise insufficient water flows into the wash cabinet.

The plastic housing of the water connection contains an electrical component. It must not be dipped in water.

Fitting an in-line water filter

If the mains water contains a large number of insoluble substances, we recommend fitting a large area filter in the connection between the stopcock and the water inlet hose threaded union. These filters can be obtained from the Miele Spares Department (Part No.: 75577).

To clean the filter

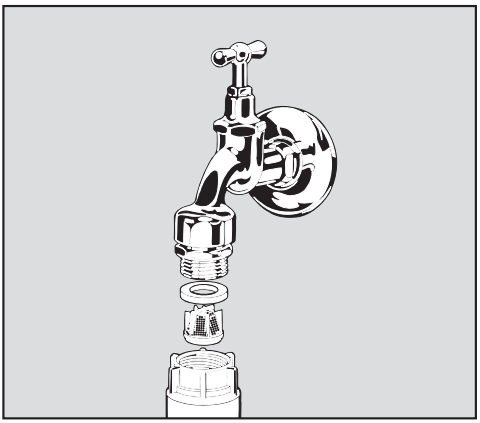

- Disconnect the appliance from the mains supply (switch off at the main socket and pull out the plug, switch off the appropriate circuit at the fuse-box or withdraw the mains fuse).
- Turn off the stopcock and unscrew the inlet hose.
- Carefully remove the rubber seal.
- Withdraw the filter using pointed pliers and clean by rinsing under running water.
- Replace filter and seal. Make sure they are sitting correctly!
- Screw back into place on the water inlet, taking care that it goes back on straight.
- Turn on the stopcock gradually to test for leaks.
  If there is a leak:
  Screw the connections on more tightly.

Cleaning the wash cabinet

In general the wash cabinet is self-cleaning, provided that the correct amount of dishwasher detergent is used.

If however there are lime scale or grease deposits these can be removed with a proprietary dishwasher cleaner.

Cleaning the door and the door seal

- Wipe the door seal regularly with a damp cloth and remove any particles of food.
- Wipe away any residue of food and drink spillage from the sides of the dishwasher door. These are not part of the wash cabinet and are not reached by water from the spray arms.

The control panel

- This should only be wiped with a damp cloth, or a suitable plastic cleaner.

Do not use an abrasive cleaner, a glass cleaner or an all-purpose cleaner. Because of their chemical composition they could cause serious damage to plastic surfaces.

The front of the dishwasher

- Laminate fronts should be cleaned using a suitable proprietary cleaning agent.
- Fronts made from wood should only be cleaned using a damp cloth or leather and dried with a soft cloth.

Do not use any cleaner containing ammonia or thinners.

With the aid of the following explanatory notes, minor faults can be corrected without contacting the Miele Service Department.

Any work on the electrical components of the appliance should only be carried out by a suitably qualified and competent person in accordance with local and national regulations. Unauthorised repairs could be dangerous.

If, however, you are unable to correct the problem, the Miele Service Department should be contacted.

Faults/possible causes

The dishwasher does not start

– The door is not properly closed.

– The plug is not properly inserted.

– The fuse is defective/has blown.

Shortly after starting a programme the dishwasher stops working

– The stopcock is shut.

Open the door and see if the indicator light for the programme selected is flashing.

- Open the stopcock and close the door.
  The dishwasher should continue the programme.

If the programme does not continue, switch the dishwasher off and then on again.

The dishes are not clean

– The dishes are incorrectly loaded.

– The wrong amount of detergent was used - see "Programme chart".

– The filters in the wash cabinet are not clean - see “Cleaning and care”.

– Spray arm jets are blocked - see “Cleaning and care”.

– The wrong programme was selected - see "Programme chart".

White residue on cutlery and crockery

– No salt in the salt reservoir.

  ■ Fill the salt reservoir with dishwasher salt for reactivation - see section on "Water softener".

– Salt reservoir lid has not been screwed on properly.

– Not enough rinse aid.

  ■ Use a higher dosage setting - see "Adding rinse aid".

Water in the wash cabinet at the end of a programme

– The drain hose is kinked.

– The drain pump may be blocked - see “Cleaning and care”.

– Foreign bodies may be obstructing the non-return valve - see “Cleaning and care”.

The crockery is not sufficiently dry

– The drying heat function is switched off.

  ■ Switch it back on again - see "Additional functions".

The indicator light for the programme selected flashes in the control panel when the door is opened after the programme has finished

– The filter in the screw connection of the valve on the water inlet hose is blocked - see "Cleaning and care".

– Too little water flows into the wash cabinet. This may be due to insufficient water pressure at the intake (flow pressure at the water inlet).

– The drain hose is kinked.

– The drain pump may be blocked - see "Cleaning and care".

All the indicator lights next to the programme touch controls are flashing after the door is opened at the end of a programme

– There is a technical fault.

■ Please call the Miele Service Department.

After sales service

- Should you still have any difficulties, or if the appliance is under guarantee please contact:

– your Miele Dealer or

– the Miele Service Department

See back cover for addresses.

- Please quote the model type and number of your appliance.

This information can be found on the data plate inside the door.

Future updates

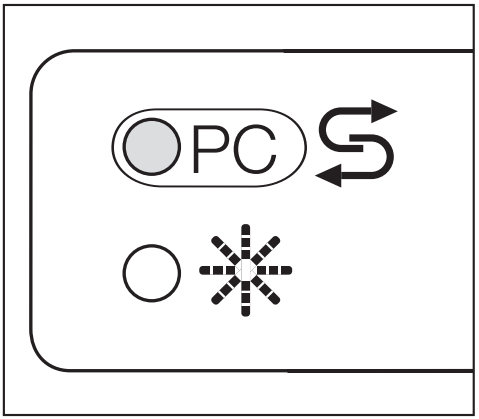

The LED marked PC is reserved for the service engineer, for updates in future years to your machine.
When for example technological developments offer advanced modifications to your existing programme cycles, a service engineer will be able to input these into your machine controls. Miele will provide information when such possibilities become available.

Bottle holder
(depending on model)

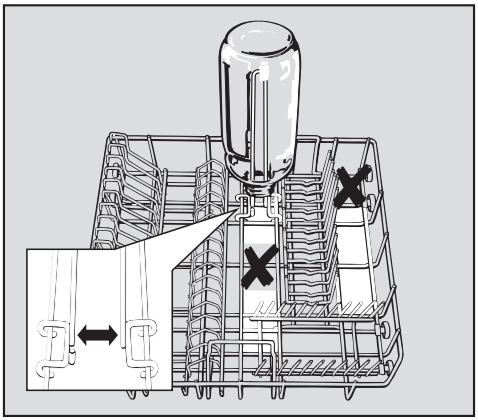

The bottle holder (e.g. for milk or baby bottles) can be used in the bottom basket.

To achieve good cleaning results the bottle holder should only be placed in the positions marked white – and on no account in the positions marked with an **X**.

Other special accessories e.g. special inserts for glasses or plates, etc. are available through your Dealer or the Spare Parts Department.
See the following list.

Installation - special situations

Brackets to fix the dishwasher under a marble-type worktop.

Extended machine feet where a height of up to 92 cm is required.

Plinth facia kit for "i" dishwashers for kitchens without a complete plinth facia run.

Inserts

Glass inserts for the bottom basket, (only available for models with removable inserts in the bottom basket).

Glass inserts for the upper basket, especially for glasses which need a special support.

Dishwasher G 673 and G 673 SC (see data plate for model number)

Test standard: IEC 436 / DIN 44990 / prEN 50242

Amount washed: 12 place settings

Programme tested: UNIVERSAL 55 °

Amount of detergent: If using a detergent containing chlorine:
5 g in compartment I, 25 g in compartment II.
If using a chlorine-free detergent:
30 g only in compartment II.

Rinse aid dispensing: Setting 3 (approx. 3 ml, set at factory)

Dishwashers with cutlery basket (G 673)

Spoon inserts: Fit the two inserts on top of the cutlery basket, (see Section on loading the dishwasher, spoon inserts). Place six spoons at intervals in each insert.

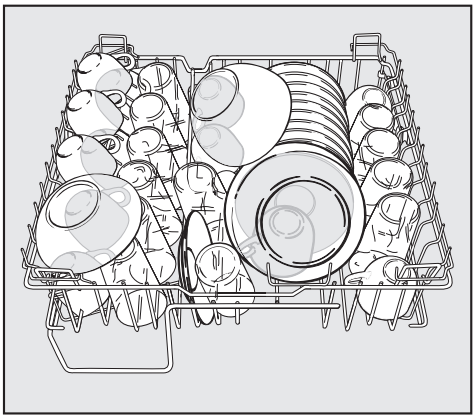

Upper basket

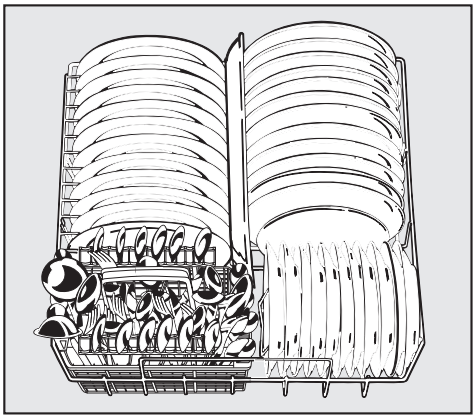

Bottom basket

Comparison tests

Dishwashers with cutlery tray (G 673 SC)

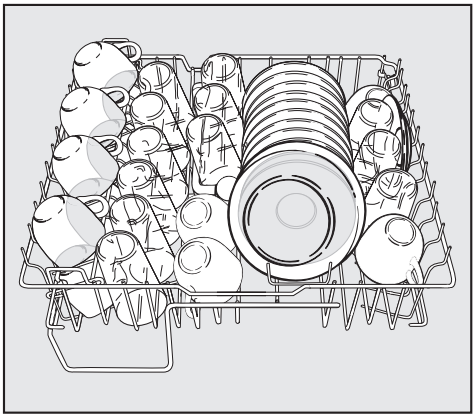

Upper basket

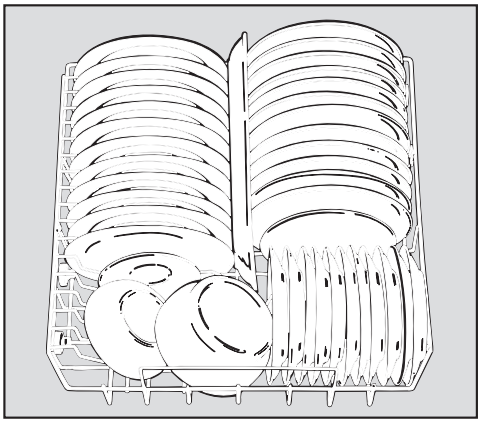

Bottom basket

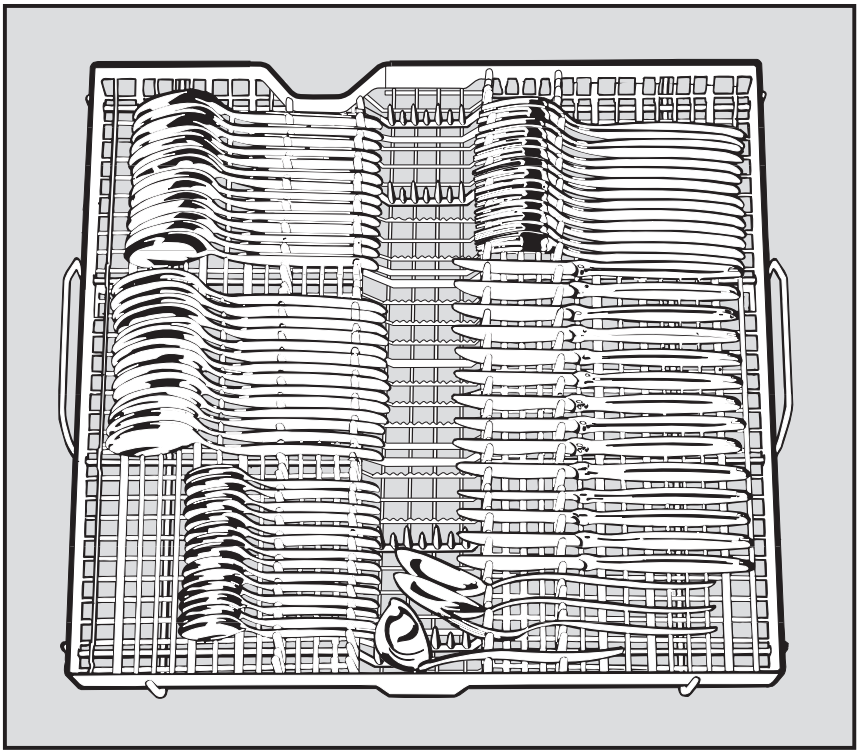

Cutlery tray

Dishwasher G 679 and G 679 SC (see data plate for model number)

Test standard: IEC 436 / DIN 44990 / prEN 50242

Amount washed: 12 place settings

Programme tested: UNIVERSAL 55 °

Amount of detergent: If using a detergent containing chlorine:
5 g in compartment I, 25 g in compartment II.
If using a chlorine-free detergent:
30 g only in compartment II.

Rinse aid dispensing: Setting 3 (approx. 3 ml, set at factory)

Dishwashers with cutlery basket (G 679)

Spoon inserts: Fit the two inserts on top of the cutlery basket, (see Section on loading the dishwasher, spoon inserts). Place six spoons at intervals in each insert.

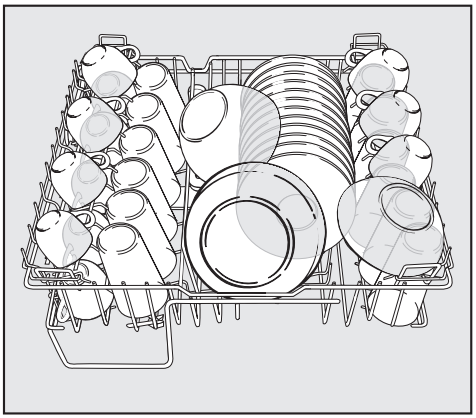

Upper basket

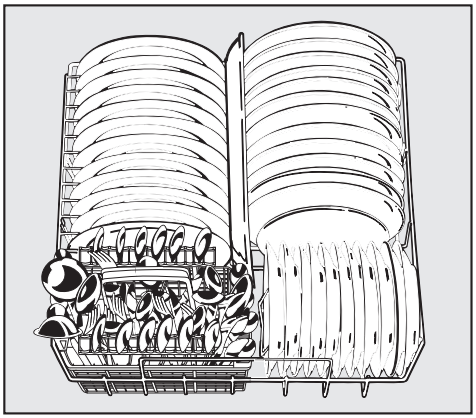

Bottom basket

Comparison tests

Dishwashers with cutlery tray (G 679 SC)

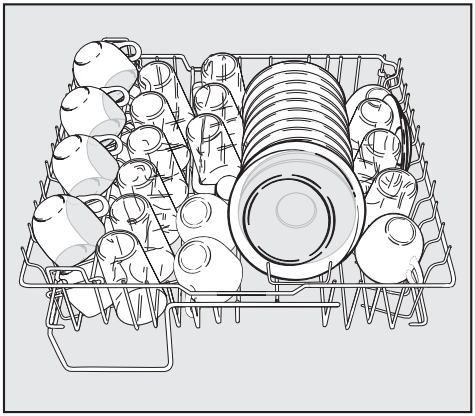

Upper basket

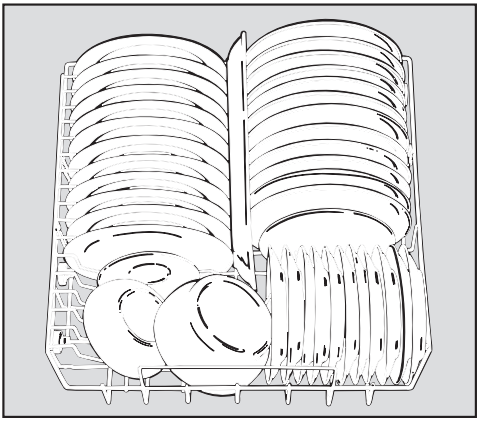

Bottom basket

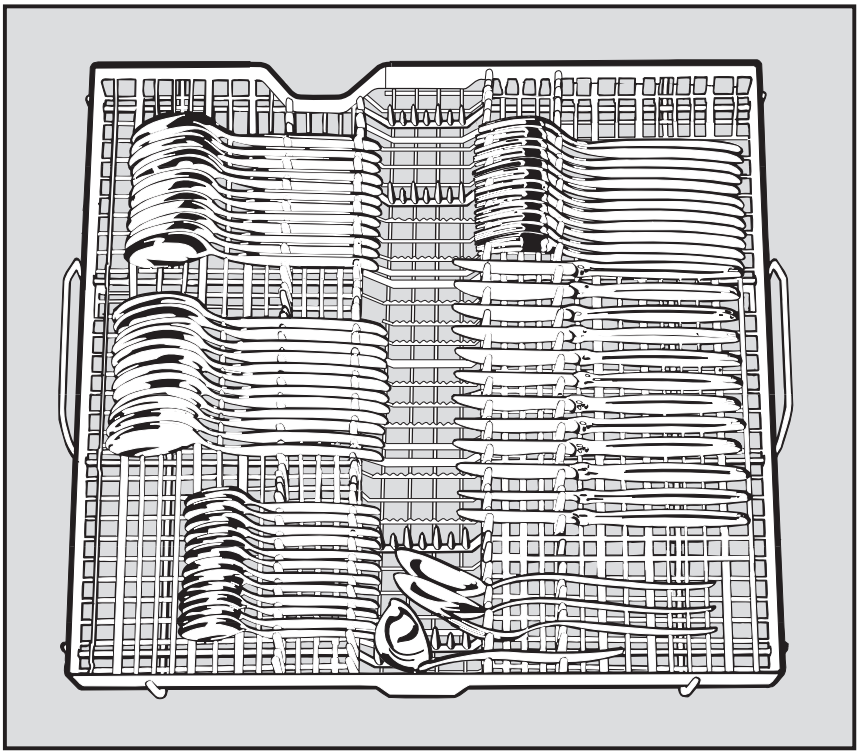

Cutlery tray

Installation instructions

Contents

Installing the dishwasher 61
1. Fit worktop protection (“niro” stainless steel coverplate) 62
2. Building the dishwasher into a niche 63
3. Fitting the matching door front 65
4. Adjusting the door front 72
5. Securing the door front 72
6. Adjusting the door springs 73
7. Levelling and securing the dishwasher 74
8. Matching the plinth facia of a kitchen run 76
Electrical connection 77
Plumbing 79
Connection to the water inlet 79
Drainage 81
Technical data 82

These fully integrated dishwashers are specially designed for building into a fitted kitchen.

The front can be fitted with a base unit front to match the kitchen furniture.

To ensure stability, these dishwashers must only be installed under a continuous worktop which must be securely screwed to neighbouring units.

Dimensions:

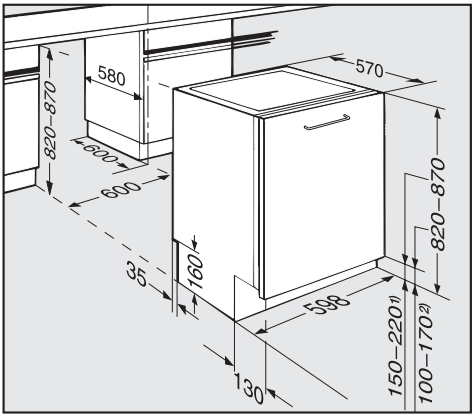

1) with 870 mm machine height
2) with 820 mm machine height

Range of adjustment approx. 5 cm (82-87 cm total height).

Extended machine feet are available at extra cost, (special accessory). These can be used for a machine height of 87 to 92 cm.

1. Fit worktop protection

A stainless steel “niro” coverplate is supplied with the machine to protect the underside of the worktop against steam rising from the machine.

The coverplate is supplied as standard.

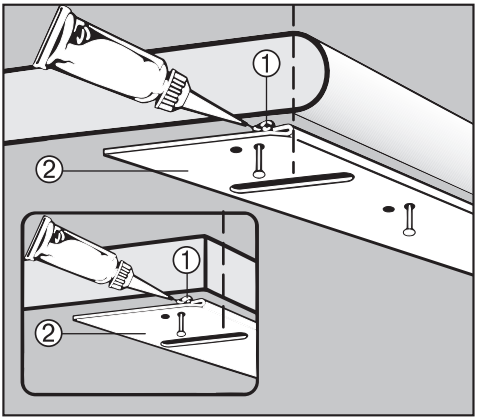

- Squeeze sealant from the tube supplied ① into the angle of the “niro” plate.
- Align the “niro” plate ② to the front edge of the worktop - see illustration - and then use tacks supplied to nail the “niro” plate to the underside of the worktop.

  On worktops with wood or laminate edging, the tacks should be nailed through the holes at the back.

2. Building the dishwasher into a niche

Connection to water and drainage should be sited beside and not behind the dishwasher for accessibility. Connections are usually made in the area under the sink. Many kitchen unit manufacturers provide a cutout in the base of the sink base unit for the hoses to be fed through.

If the base unit has no opening and if there is not an opening through the plinth area for connections, one must be cut.

Suggested dimensions: 60 x 110 mm.

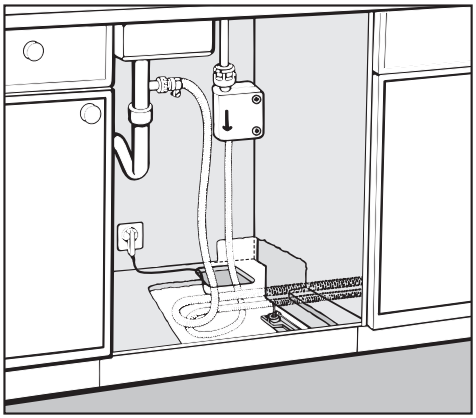

For some installation steps it is necessary to pull the dishwasher slightly out of the recess. Therefore do not make these connections until last.

The slides make installation of the dishwasher easier and protect the floor from possible damage when moving the appliance into and out of the recess. They are also used for adjusting the height of the rear screw feet.

- Adjust the height manually before installing the dishwasher. Leave a space of approx. 5 mm below the worktop to allow the dishwasher to be pushed back easily into the recess. Make sure that the dishwasher stands level.

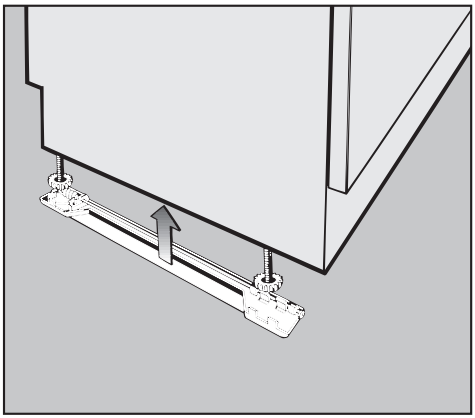

- Press the slides - with the ratchet at the rear - under the screw feet.

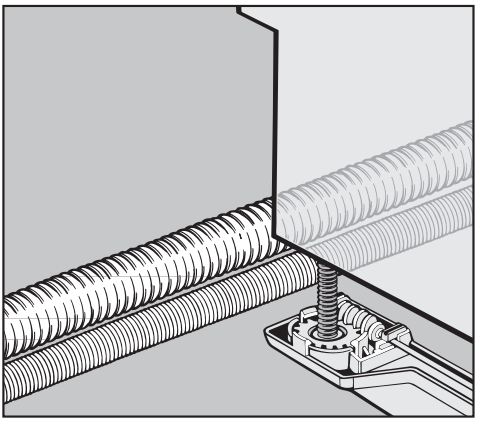

- Push the dishwasher right back into the recess. Ensure that drain hose, inlet hose and electric cable are laid to reach the connection point without any kinks.

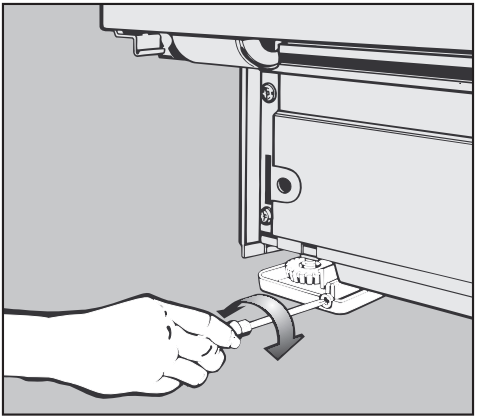

- Adjust the rear screw feet to the required height.

Higher = turn clockwise

Lower = turn anti-clockwise

Several turns are needed to adjust 1 mm in height. A battery powered screwdriver could be used.

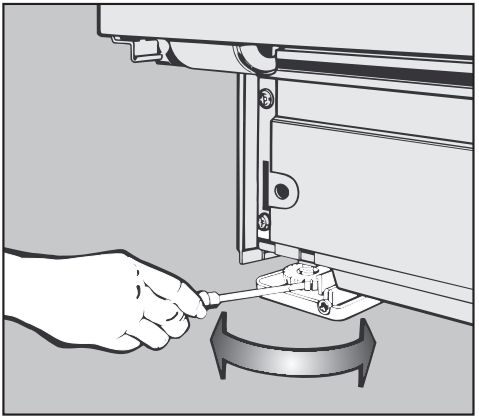

- Adjust the front screw feet manually or with a flat blade screwdriver.

It is easier to adjust the screw feet if the weight of the dishwasher is not bearing down on them.

- If possible tip the machine slightly.
- For fine adjustments it may be necessary to press with a screwdriver against the cogs of the feet.

Screw the feet out until the dishwasher is right up against the underside of the worktop, to which it will be screwed later. Ensure that the dishwasher stands level.

3. Fitting the matching door front

The front of the dishwasher needs to be fitted with a base unit front to match the kitchen furniture. This door front may be a single panel or a two-piece panel, divided to give a dummy drawer facia line.

Dimensions:

Width:
Depending on the width of your dishwasher, a base unit front of either 45 cm or 60 cm width;

Total height:
height of a full base unit front, or with a two-piece panel, height of shorter unit front plus gap plus dummy drawer facia;

Thickness:
at least 18 mm thickness in the areas where the fixing bracket is screwed on.

A door handle must be fitted to the front of the door front before the fixing bracket is fitted.

The door handle fixing screws **must** be countersunk, to avoid any protrusions at the rear of the door front.

Position the door handle to match the others on the kitchen furniture. It should be at drawer height in the centre of the panel.

The weight of the door front will affect the functioning of the door springs. After fitting it is essential for this to be checked out. See Step 6.

The door front is fixed to the machine door outer panel using a fixing bracket. This fixing bracket has to be premounted on the rear of the door front.

When the dishwasher is delivered the fixing bracket is secured to the dishwasher. To remove it:

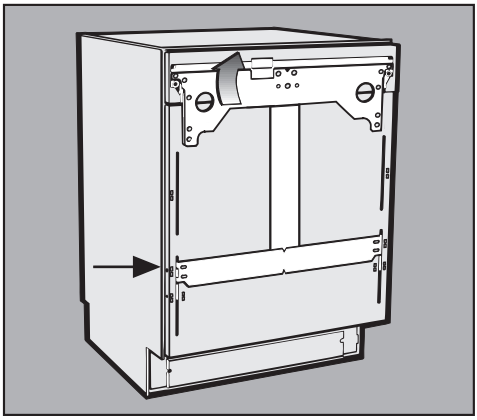

- Loosen the fixing screws (arrow) on each side of the machine door outer panel.
- Push the fixing bracket upwards from the sprung bolts and remove.
- Remove the protective packaging.

Opening the door when the fixing bracket has been taken off:

- Insert your finger into the T-shaped opening of the door opener and pull the door open.

Dimension "**X**" must be calculated and noted before attaching the fixing bracket.

Dimension "**X**" is the distance shown on the illustration between the drill hole in the machine outer door panel and the lower edge of the neighbouring unit door(s).

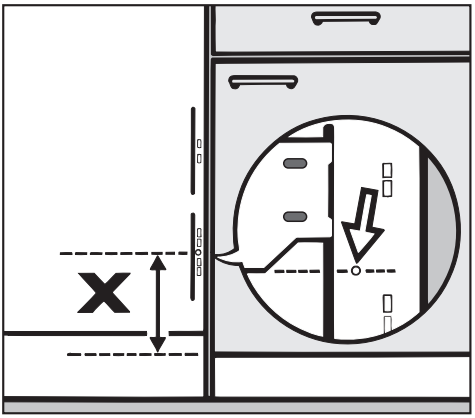

- Push the dishwasher into the recess and adjust the height.
- Calculate dimension "**X**".

Fitting the fixing bracket to a door front

- Lay the door front with the rear side facing upwards. Draw a vertical line down the middle of the door front rear to use as a guide line.
- Mark the dimension "**X**" over on to the rear of the door front, up from the bottom edge.

With two-piece panels:

If the two-piece panel is joined by non-flush fixings these must be removed. The fixing bracket supplied with the dishwasher can be used to secure both pieces.

Make sure that the combined height worked out is retained.

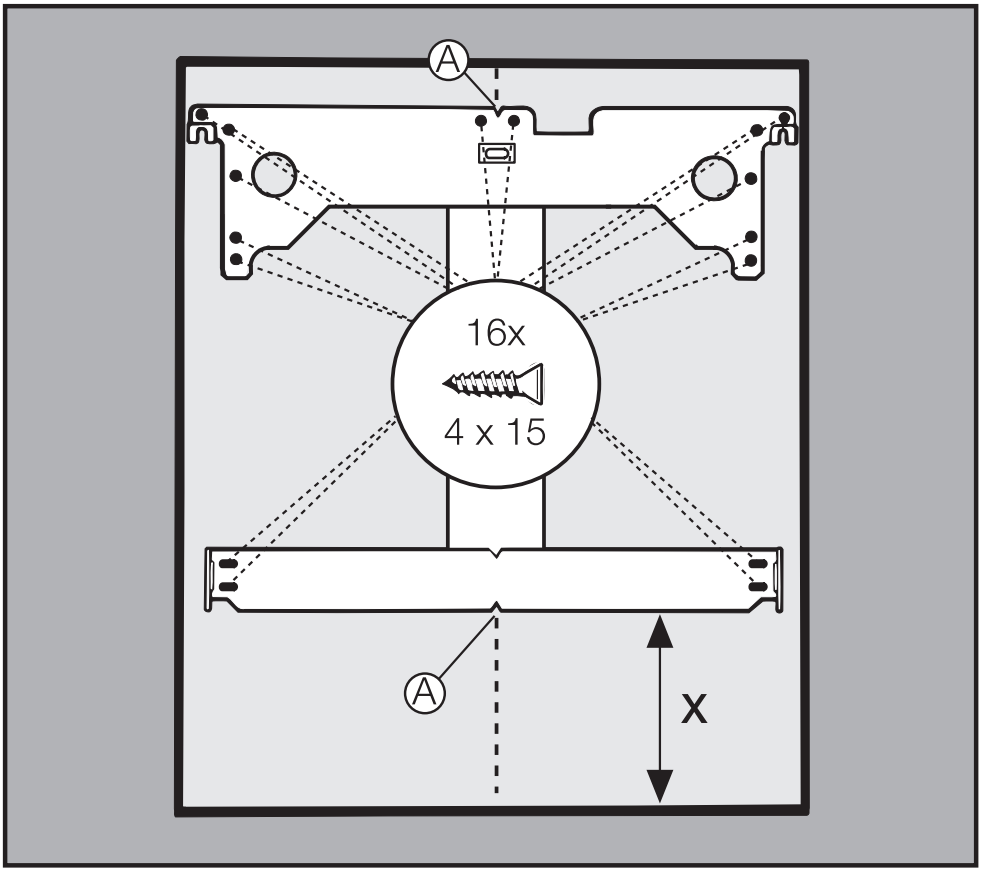

There are notches on the fixing bracket, marked at Ⓐ in the illustration.

- Lay the fixing bracket on the rear of the door front, using dimension "**X**" for the distance from the bottom, and so that the notches marked Ⓐ in the middle of the fixing bracket align with the vertical guide line, (see diagram).
- If necessary pre-drill holes for the screws (dia. 2.5 mm, approx. 10 mm deep).
- Screw the fixing bracket on securely.

Fitting the door front

The door front is correctly fitted when:

– the lower lugs of the fixing bracket rest firmly in the lower slits of the dishwasher outer door panel.

– The prongs of the fixing bracket lie on the sprung bolts in the upper corners of the dishwasher door.

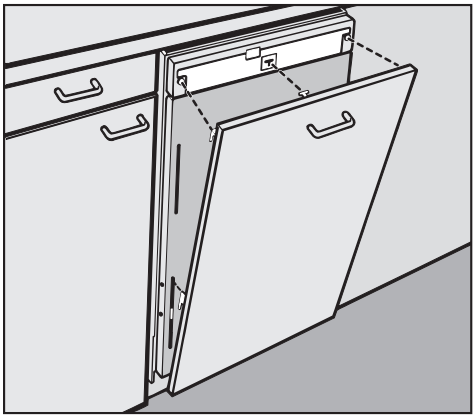

■ Pull the dishwasher out of the recess enough for the door front fixing screws to be easily accessible, and the upper edge of the dishwasher door to be unobstructed by the work top.

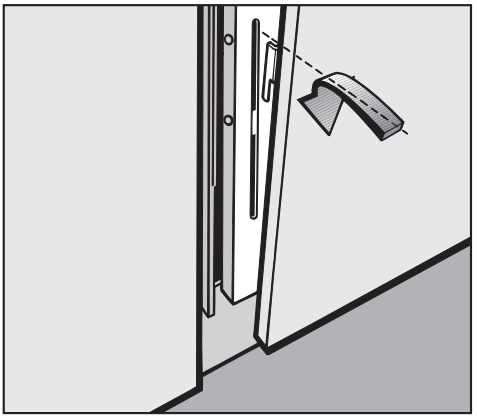

■ Hang the door front so that the lower lugs of the fixing bracket fit into the lower slits of the dishwasher outer door panel, and draw slightly upwards.

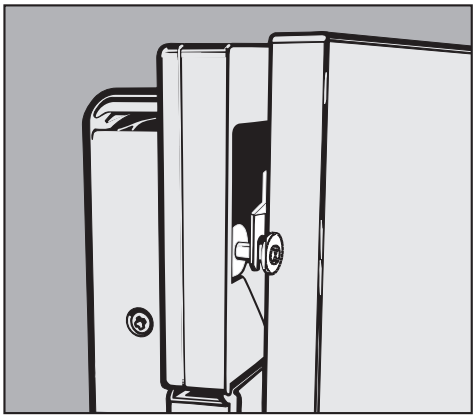

- Press the door front against the dishwasher outer door panel.
- At the same time slide the prongs of the fixing bracket over the sprung bolts and press into place.
- Press the door front downwards so that the prongs grip behing the sprung bolts.

4. Adjusting the door front

When fitted the door front can be adjusted up to a maximum of 2 mm upwards or downwards to match adjoining base unit fronts.

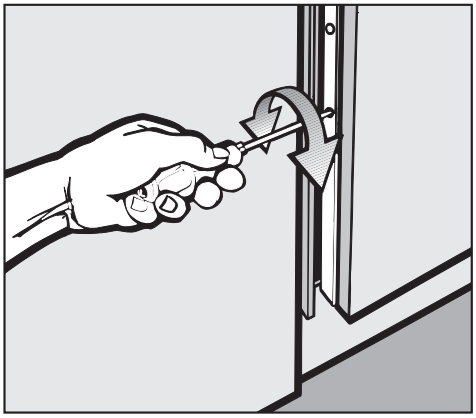

- Adjust the height of the door front with the lower recessed adjusting screw (Torx T20) at each side of the machine door outer panel.
  higher = turn clockwise.
  lower = turn anti-clockwise.

5. Securing the door front

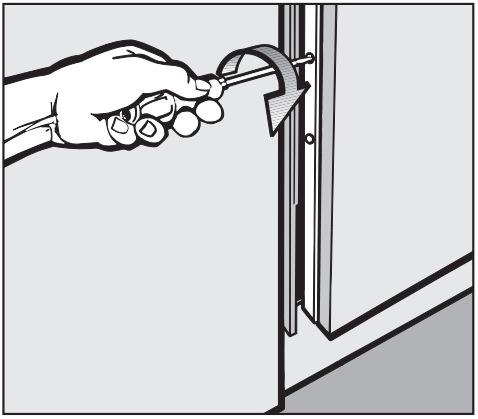

- Secure the door front by tightening the upper recessed fixing screws (Torx T20) at each side of the machine door outer panel.
- Plug the fixing screw recesses with the plastic stoppers provided.

6. Adjusting the door springs

The door springs are correctly adjusted when a half opened door (approx. 45° opening angle) remains in this position when released.

If the door lowers to the horizontal position the door springs need to be tightened.

If, however, it rises up, then the springs need to be released.

The adjusting screw is located in the upper front strip at the left hand side of the dishwasher.

- Open the dishwasher door.

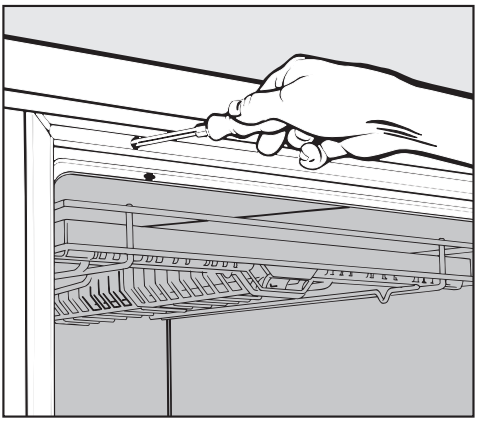

- Adjust the door spring with a Torx T20 screwdriver until it is correctly balanced:
  – turn clockwise = tighten
  – turn anti-clockwise = loosen.

7. Level and secure the dishwasher

To ensure the stability of the dishwasher it must be screwed to the continuous worktop after it has been positioned.

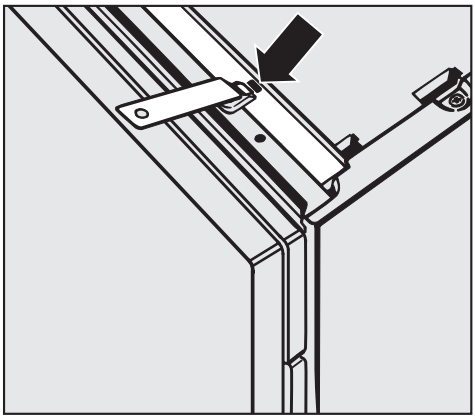

- Fit the securing pieces into the slots on both the left and right hand sides.
- Push the dishwasher into the recess.
- Open the dishwasher door.

The hole in the securing piece must line up with the oval hole in the niro steel plate.

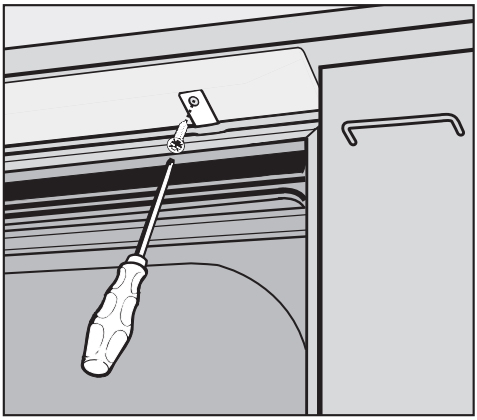

- Screw the countersunk screws (3.9 x 22) upwards through the securing pieces on the left and right hand sides into the work surface to secure the dishwasher.

Ensure that the seal on the top edge of the dishwasher fits directly against the worktop. If this is not the case, adjust the height screws more, (see Step 2).

For “Corian” or granite worktops there is a special accessory to fix the dishwasher to an adjacent kitchen unit.

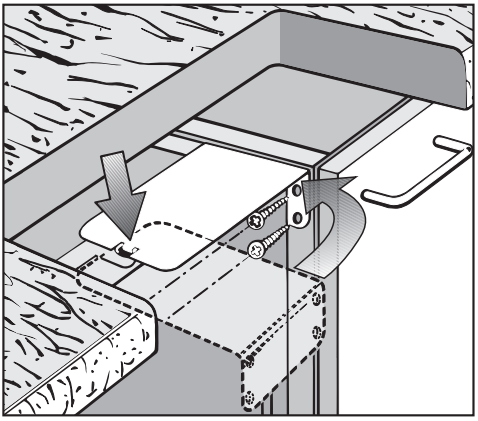

- Pull the dishwasher approx. 5 to 10 cm out of its recess.
- Fit the lug of each fixing bracket into the guide hole on top of the dishwasher, and then swing to the left or right side respectively.
- Push the dishwasher back into the recess, align, and fix to the adjacent kitchen unit(s) with 2 screws (3.5 x 15) for each bracket.

8. Matching the plinth facia of a kitchen run

The plinth area of the dishwasher is normally covered with a plinth run matching the kitchen furniture.

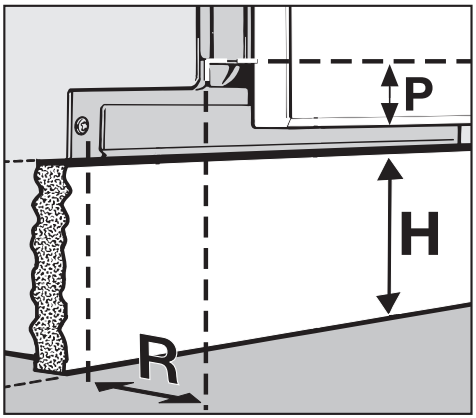

The height (**H**) of the plinth facia around the dishwasher depends on the plinth return (**R**) and any additional measurement the door front adds to the dishwasher door, (**P**).

- Place the plinth facia directly in front of the kitchen run but do not attach.
- Carefully open the dishwasher door.

If the door front comes into contact with the kitchen plinth when the dishwasher door is opened the plinth facia in the area around the dishwasher door needs to be cut to size.

- To do this mark where the edge of the door front comes into contact with the plinth facia.
- Cut out the plinth facia along this line.
- Place the plinth facia in front of the kitchen run again and check whether the dishwasher door can be opened fully.
  If it cannot, trim the plinth facia to the correct size.
- Secure the plinth facia to the adjacent kitchen units.

If your kitchen does not have a plinth run matching the kitchen furniture, the plinth area can be covered with a separate plinth kit, available at extra cost.

Please follow the installation instructions carefully.

- This dishwasher is supplied ready for connection to an a.c. single phase supply, (230 - 240 V 50 Hz for the UK and Australia). It is supplied with a mains cable and moulded plug.

All electrical work should be carried out by a competent person in accordance with national and local regulations. Connection should be made via a fused plug and suitable switched socket which is easily accessible.
For extra safety it is advisable to install a residual current device (RCD) with a trip current of 30 mA.

- The voltage, rated load and fuse rating are given on the data plate.
- Please ensure that these match the household mains supply.

Important

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol ⏚ or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red (UK), or marked with the letter A for (AUSTRALIA).

WARNING
THIS APPLIANCE MUST BE EARTHED

Non rewireable plugs BS 1363

If this machine or appliance is fitted with a non-rewireable plug, the following information applies:

If the socket outlets are not suitable for the plug supplied with this product, it must be cut off and an appropriate plug fitted.

The plug cut from the flexible cord should be disposed of and on no account be inserted into a socket elsewhere in the house (electric shock hazard).

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words in the base of the plug (as applicable to the design of plug fitted).

The correct fuse rating of the replacement fuses that are ASTA approved to BS 1362 should be fitted. Replacement fuse covers may be purchased from your local electrical suppliers, or Miele Service Agent.

(The German standard version is supplied with a cable and moulded plug for connection to a 230 V single phase supply. It must only be connected via a fused 16 A socket).

Connection to the water inlet

Water in the dishwasher must not be used as drinking water.

- The dishwasher may be connected to a cold or hot water supply, max. 60 °C. When connected to a hot water supply all programme stages which would otherwise be carried out with cold water (pre-wash and interim rinse) will be carried out with hot water.
- The inlet hose is approx. 1.5 m long; a longer hose (4 m) may be bought from the Miele Spare Parts Dept.
- A stopcock with a 3/4" male thread must be provided on site.
- The dishwasher is constructed to comply with DVGW regulations, and may be connected to a suitable supply without an extra non-return valve if national regulations allow this.
- The water pressure (flow rate at the take-off point) must be between 0.3 and 10 bar pressure.
  If the water pressure is too high, a pressure reducer valve must be fitted.

The water inlet hose must not be shortened or damaged in any way, (see following illustration).

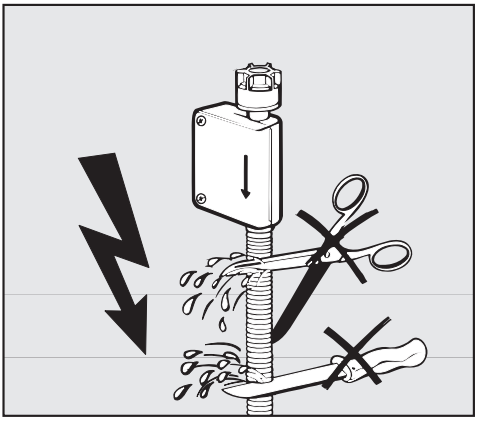

- Connect the inlet hose with the “Waterproof-System” preferably vertically so that the hose exits from the bottom of the "Waterproof valve" box.

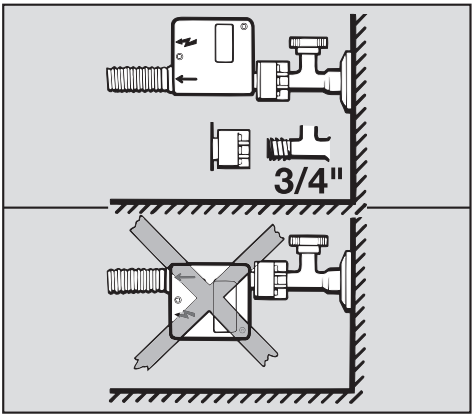

- If this is not possible, it can be installed horizontally, but **it is essential** that the main body of the "Waterproof valve" box is above the hose exit (see illustration). The ’lightning’ power symbol should be above the water flow ’arrow’.

There must be a distance of **at least 20 cm** between the floor and the bottom of the “Waterproof valve” box, for either vertical or horizontal installation.

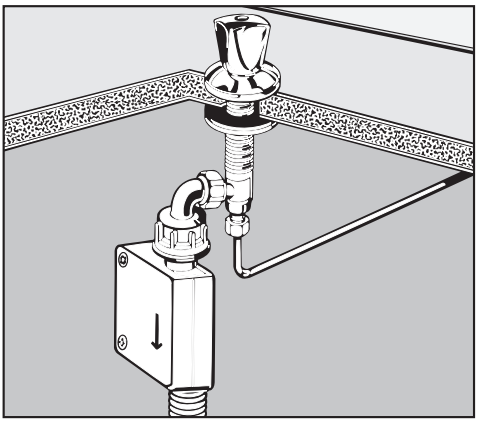

- If the stopcock is situated in the worktop, a special angle connector can be ordered from the Miele Spare Parts Dept. (Part No. 2078910).

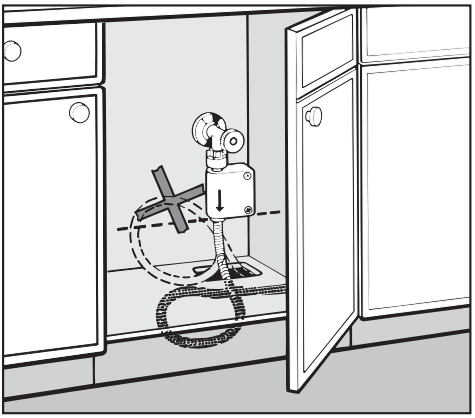

- Lay the hose in such a way that it does not rise above the bottom of the “Waterproof valve” box (see illustration).

Drainage

- The machine drainage system is fitted with a non-return valve, which prevents dirty water from flowing back into the machine via the drain hose.
- The dishwasher is supplied with approx. 1.5 m of flexible drain hose with an internal diameter of 22 mm.
- The drain hose can be extended using a connection piece and an extra drain hose, (up to max. 4 metres).
- The connection socket on the dishwasher can be turned. The hose can thus be laid to the right or left without needing to loosen the hose clip.
- If the hose is to be directly fitted to the drainage outlet on site, use the hose clip supplied.
- The on-site water pipe connection for the drain hose may be designed to fit more than one diameter of hose. The connection socket must be shortened if it juts too far into the drain hose. Otherwise the drain hose can become blocked.
- The drain system must not exceed 4 metres. The drain pump has a maximum delivery head of 1 metre.
- The drain hose must not be shortened.

Venting the drainage system

- Open the dishwasher door fully.

If the site drain connection is situated lower than the guide path for the bottom basket rollers in the open door the drainage system must be vented. Otherwise a siphoning effect during a programme can cause the machine to empty itself of water.

To vent:

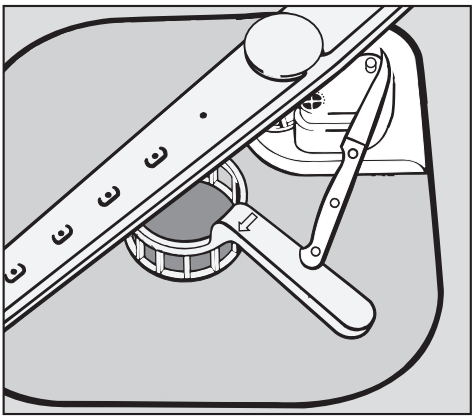

- Cut off the top of the vent valve in the wash cabinet.

Technical Data

Height	82 cm (adjustable + 5.0 cm)
Width	59.8 cm
Width of building in recess	60 cm
Depth	57cm
Depth with door open	115.5 cm
Weight	approx. 52 kg
Voltage Rated load Fuse rating	} see data plate
Test marks	VDE, Radio and Television suppressed
Water pressure (flow rate)	0.3 - 10 bar pressure
Hot water connection	max. 60 °C
Delivery head	max. 1 m
Drainage length	max. 4 m
Connection cable	approx. 1.7 m
Capacity	12 place settings

Miele

United Kingdom
Miele Co. Ltd.
Fairacres, Marcham Road, Abingdon, Oxon, OX14 1TW
tel. Abingdon (01235) 554455 - fax (01235) 554477
Service Office, tel. Abingdon (01235) 554466

Ireland:
Miele Ireland Ltd.
Wilton House, Naas Road, Dublin 22
Tel. (01) 4504024, Fax (01) 4504037

Alteration rights reserved (G 673 / G 679) /000

4897

This paper consists of cellulose which has been bleached without the use of chlorine.